Sauna "Icon" 220,Ø226

NB! Please read whole manual before start.

All given measurements are in millimeters!

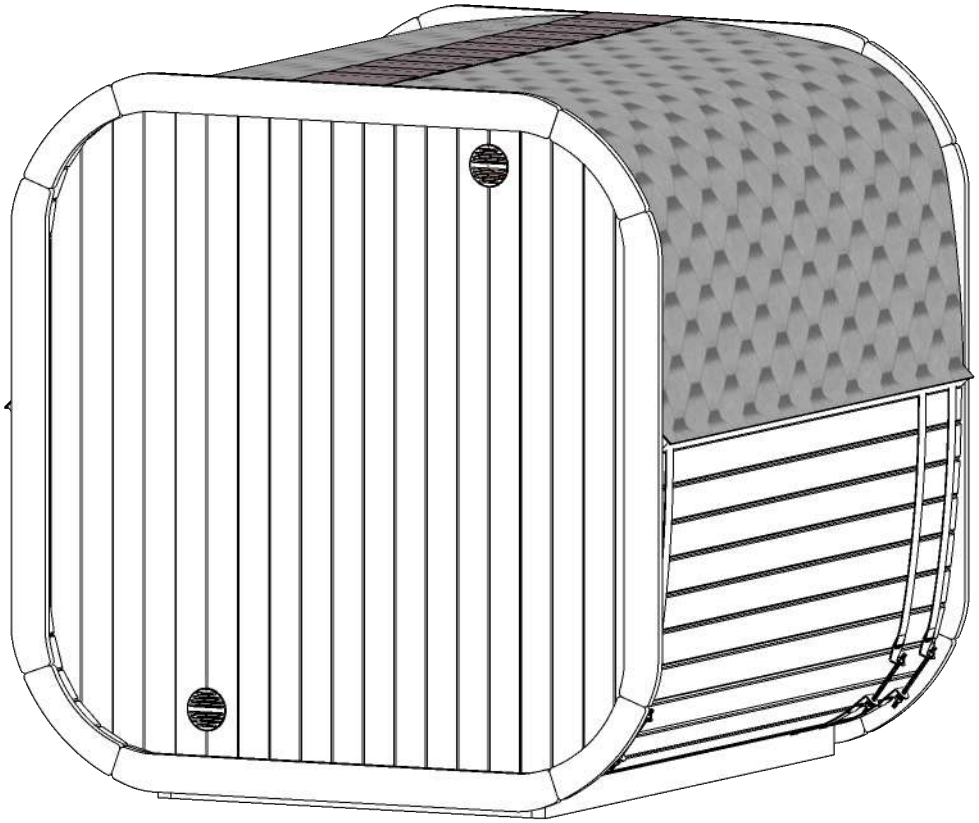

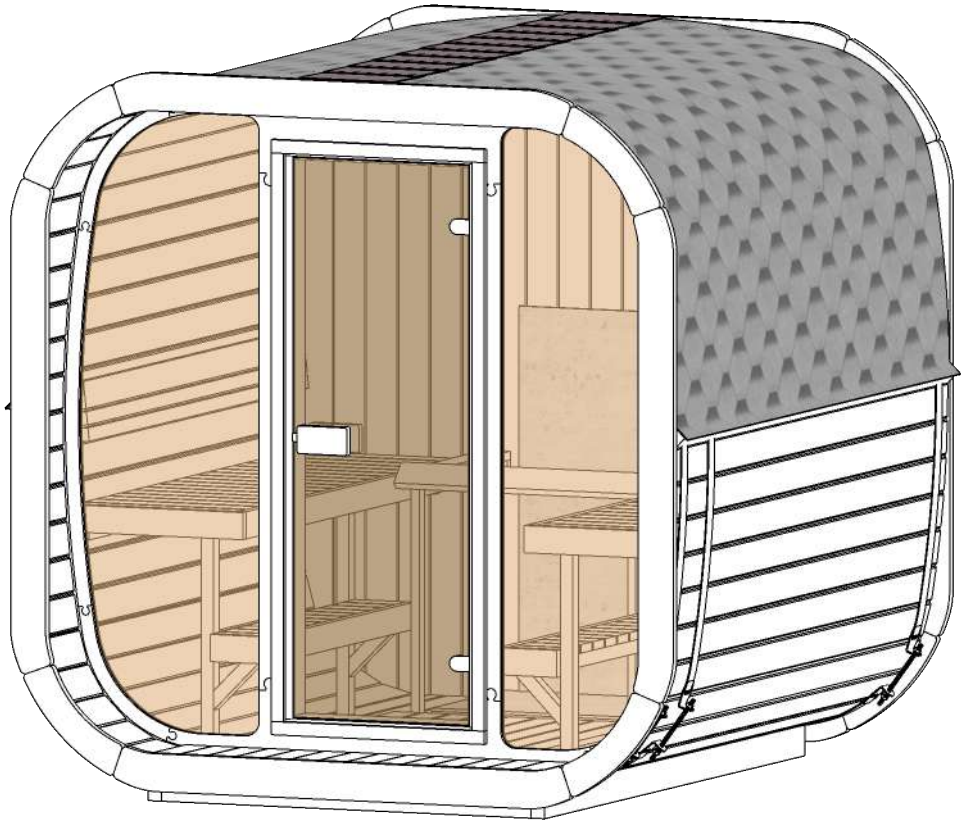

Sauna "Icon" 220,Ø226

Details list 1.

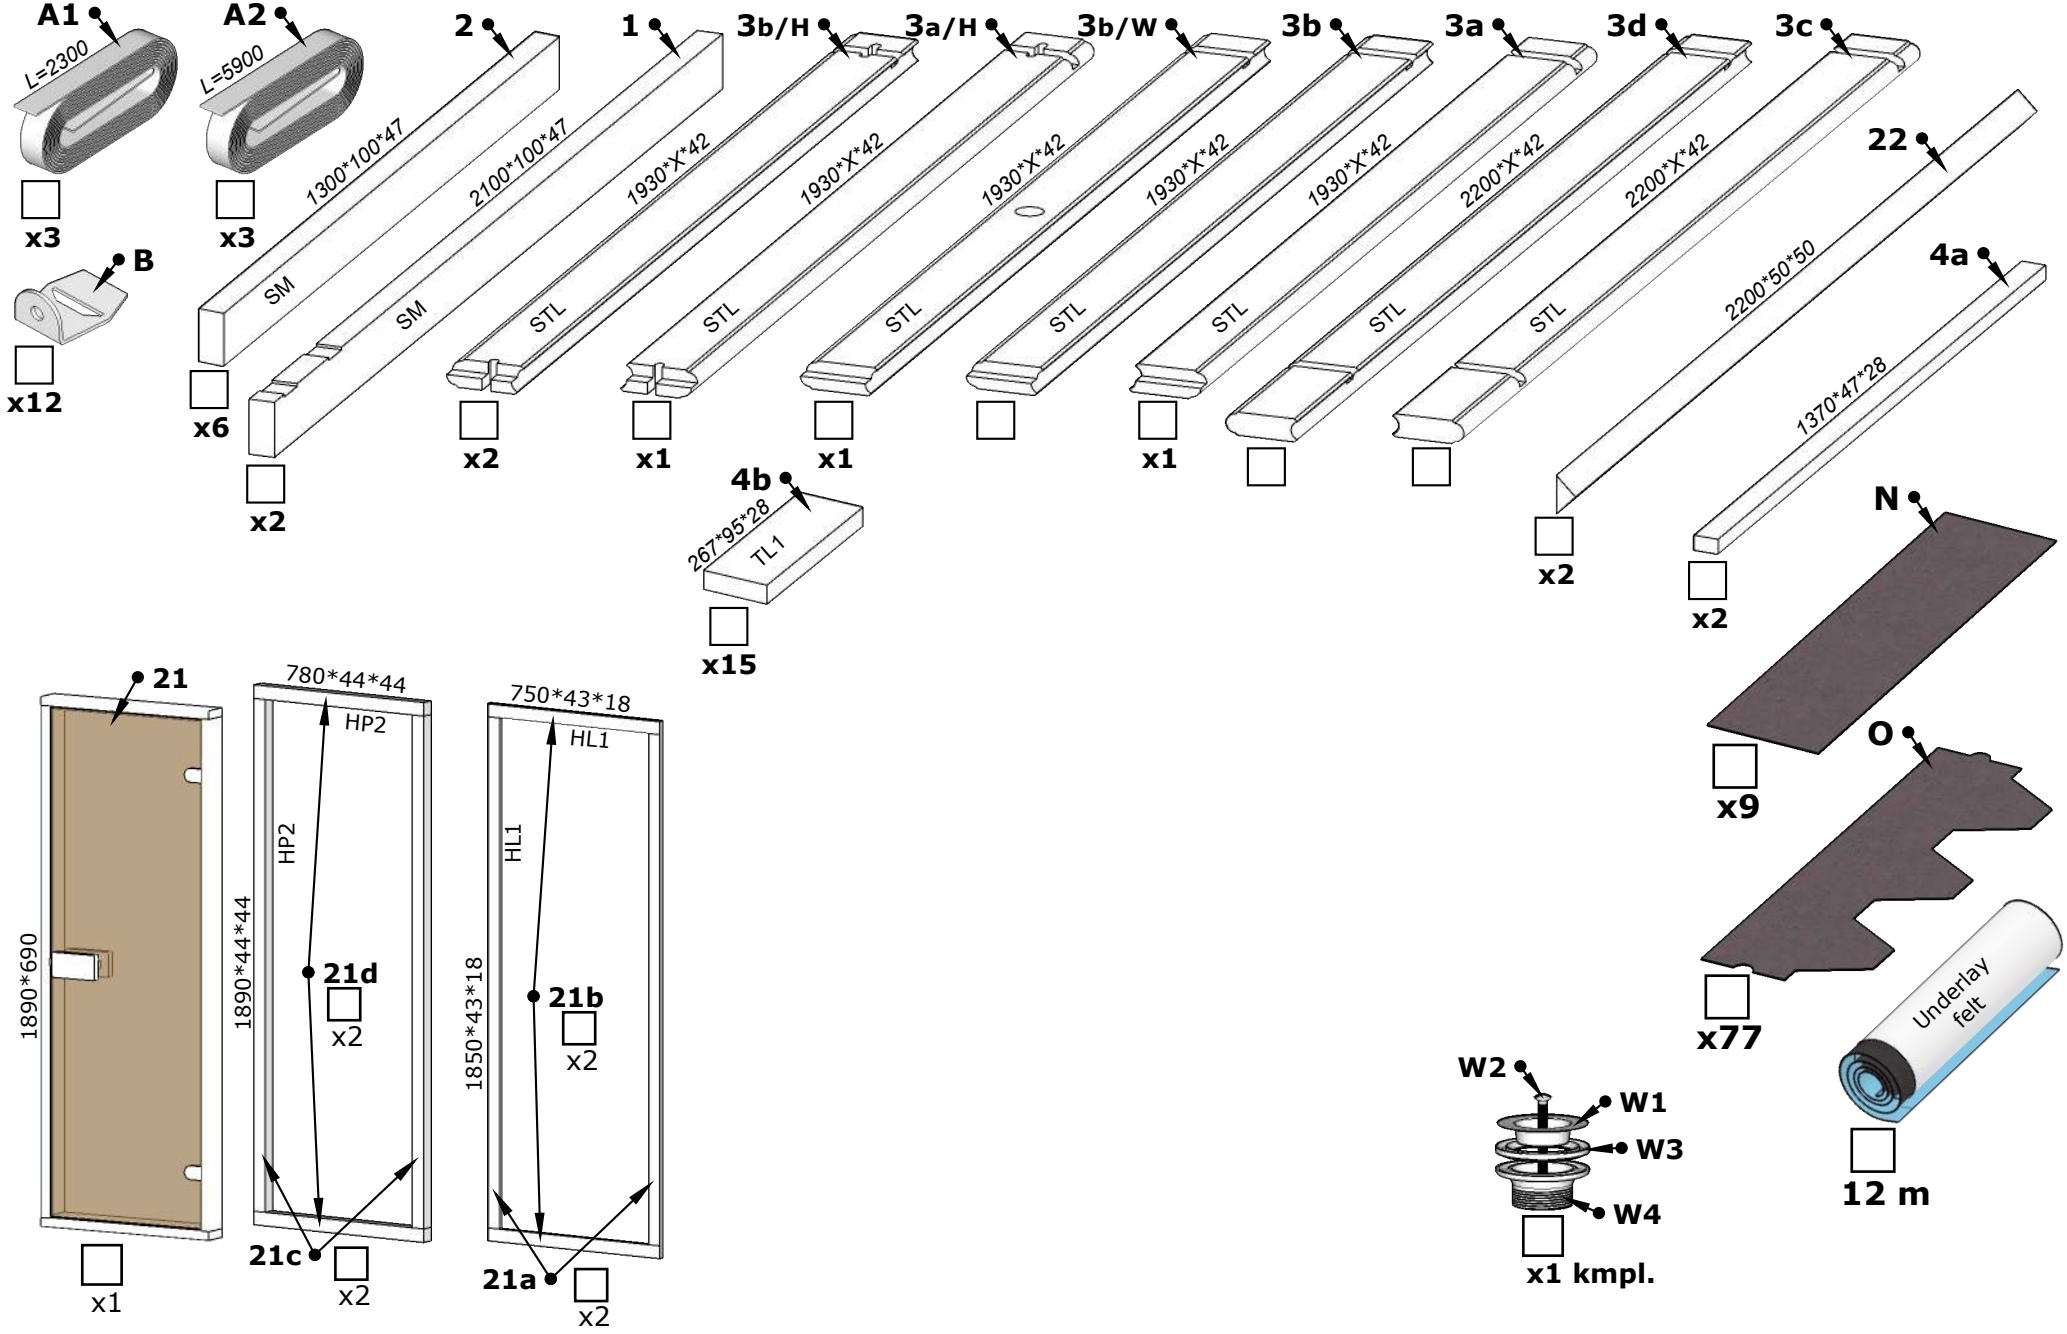

Sauna "Icon" 220,Ø226

Details list 2.

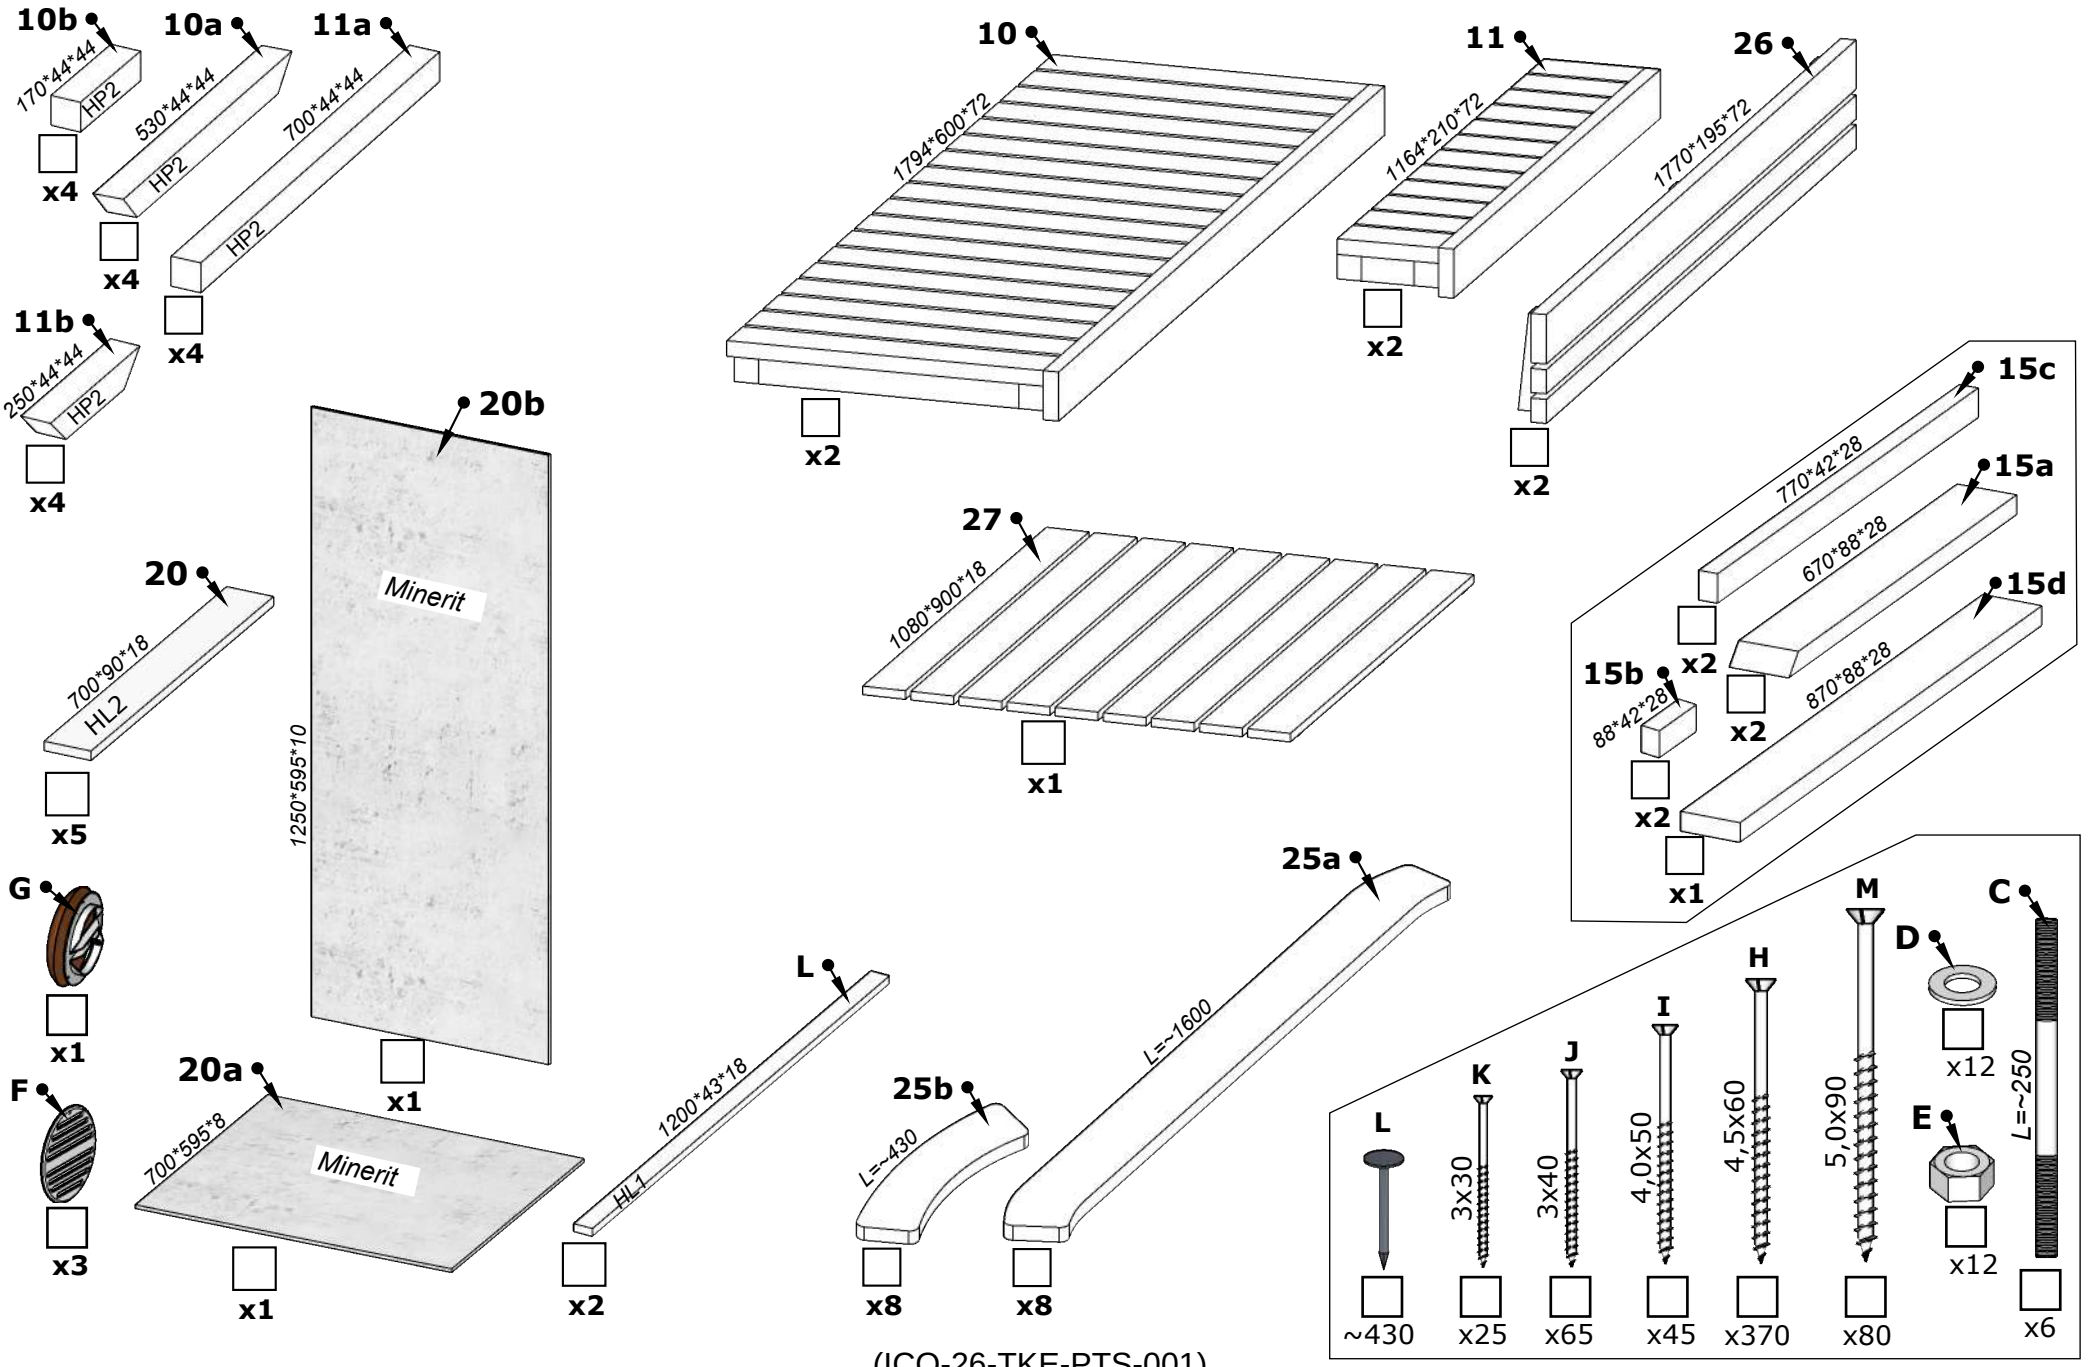

(ICO-26-TKE-PTS-001)

Icon Ø226 Front glass wall assembly

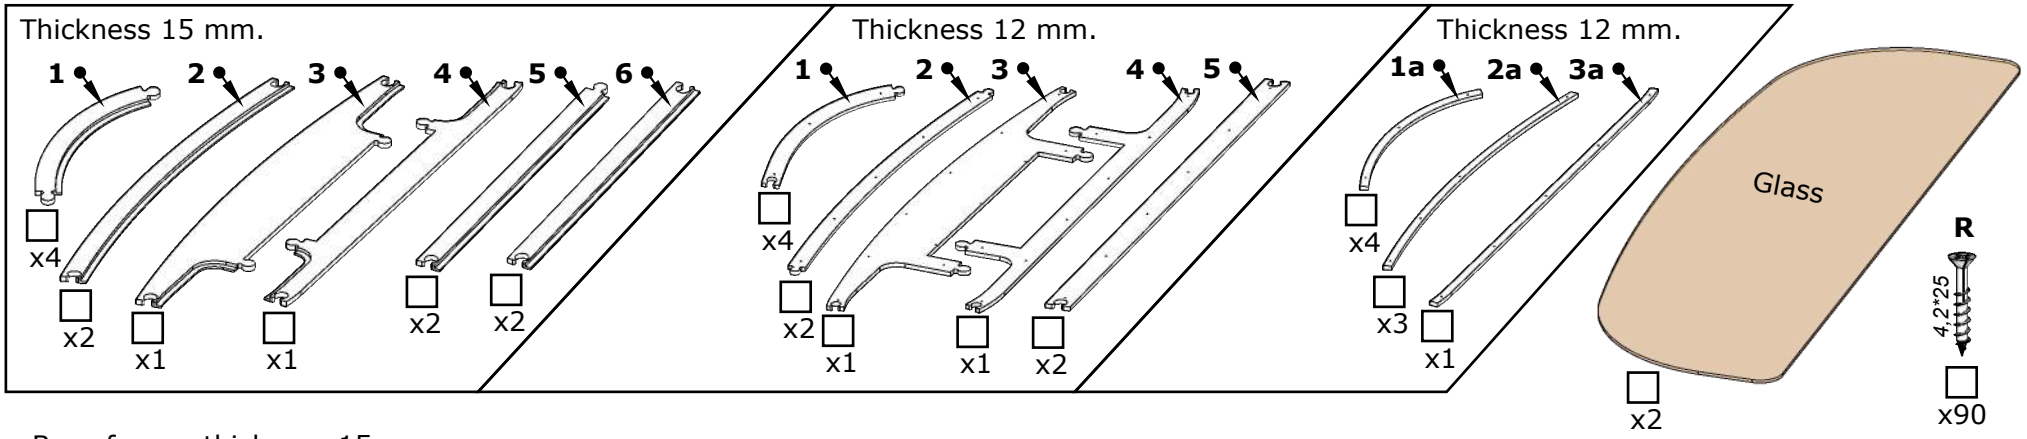

Base frame, thickness 15 mm.

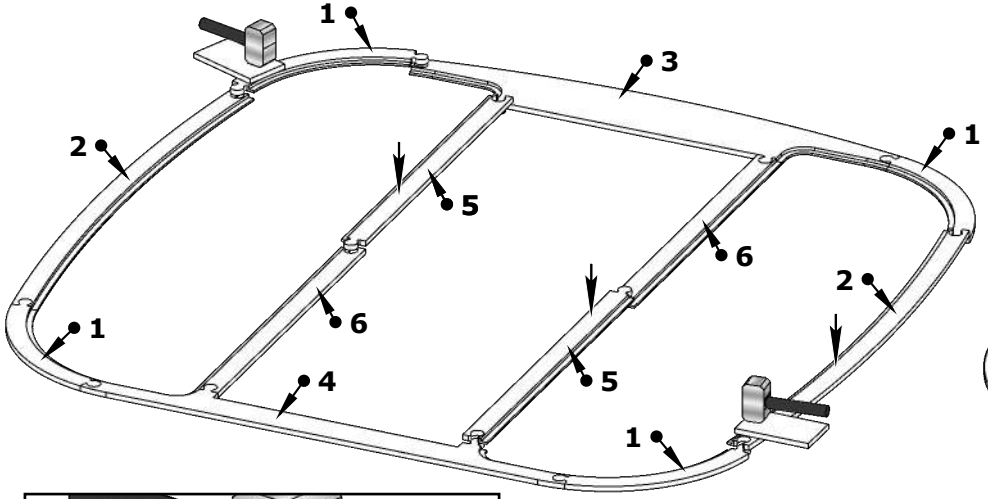

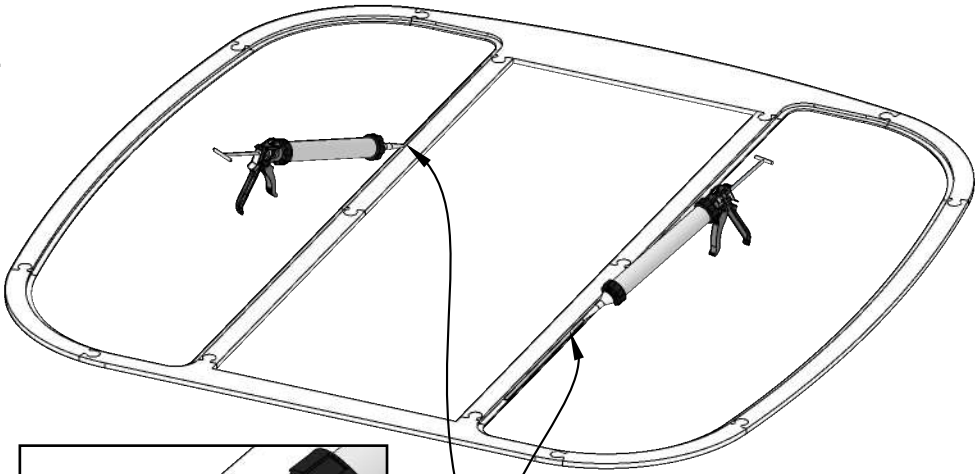

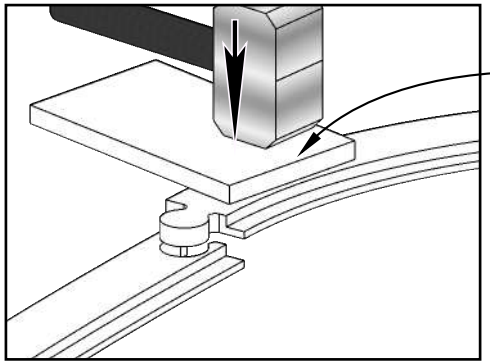

Use piece of wood to protect plywood

I

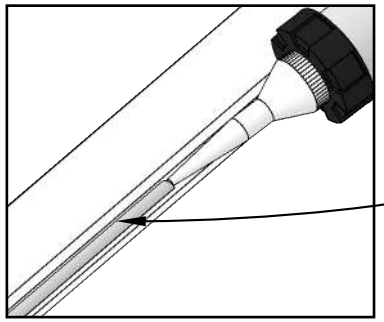

Apply waterproof silicone to the groove

II

1.

Icon Ø226 Front glass wall assembly

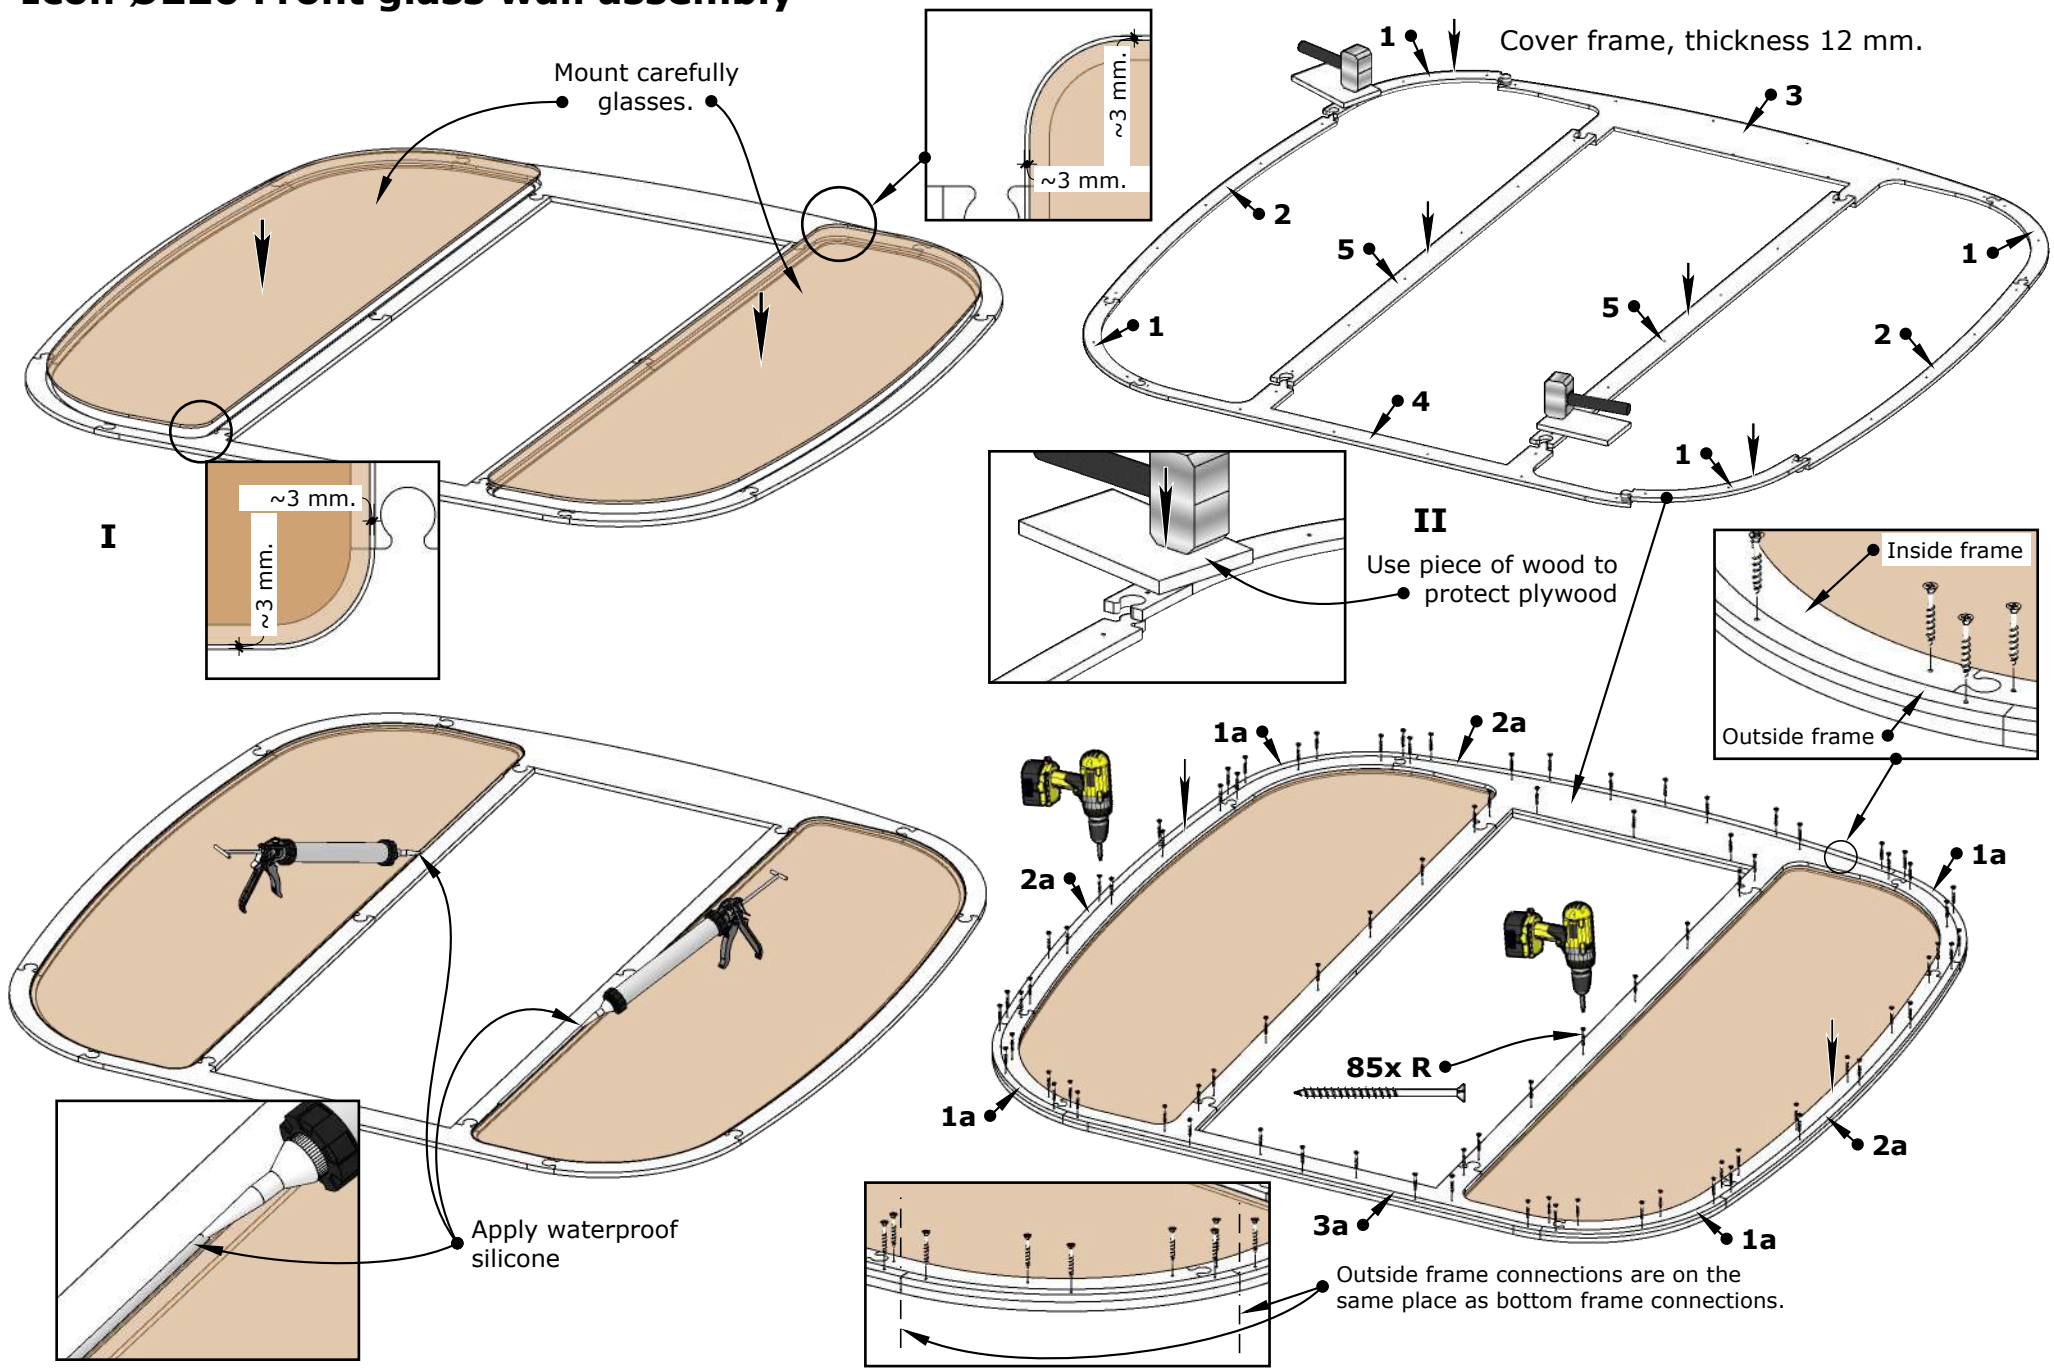

2.

(ICO-26-TKE-PTS-001)

Icon Ø226 Front glass wall assembly

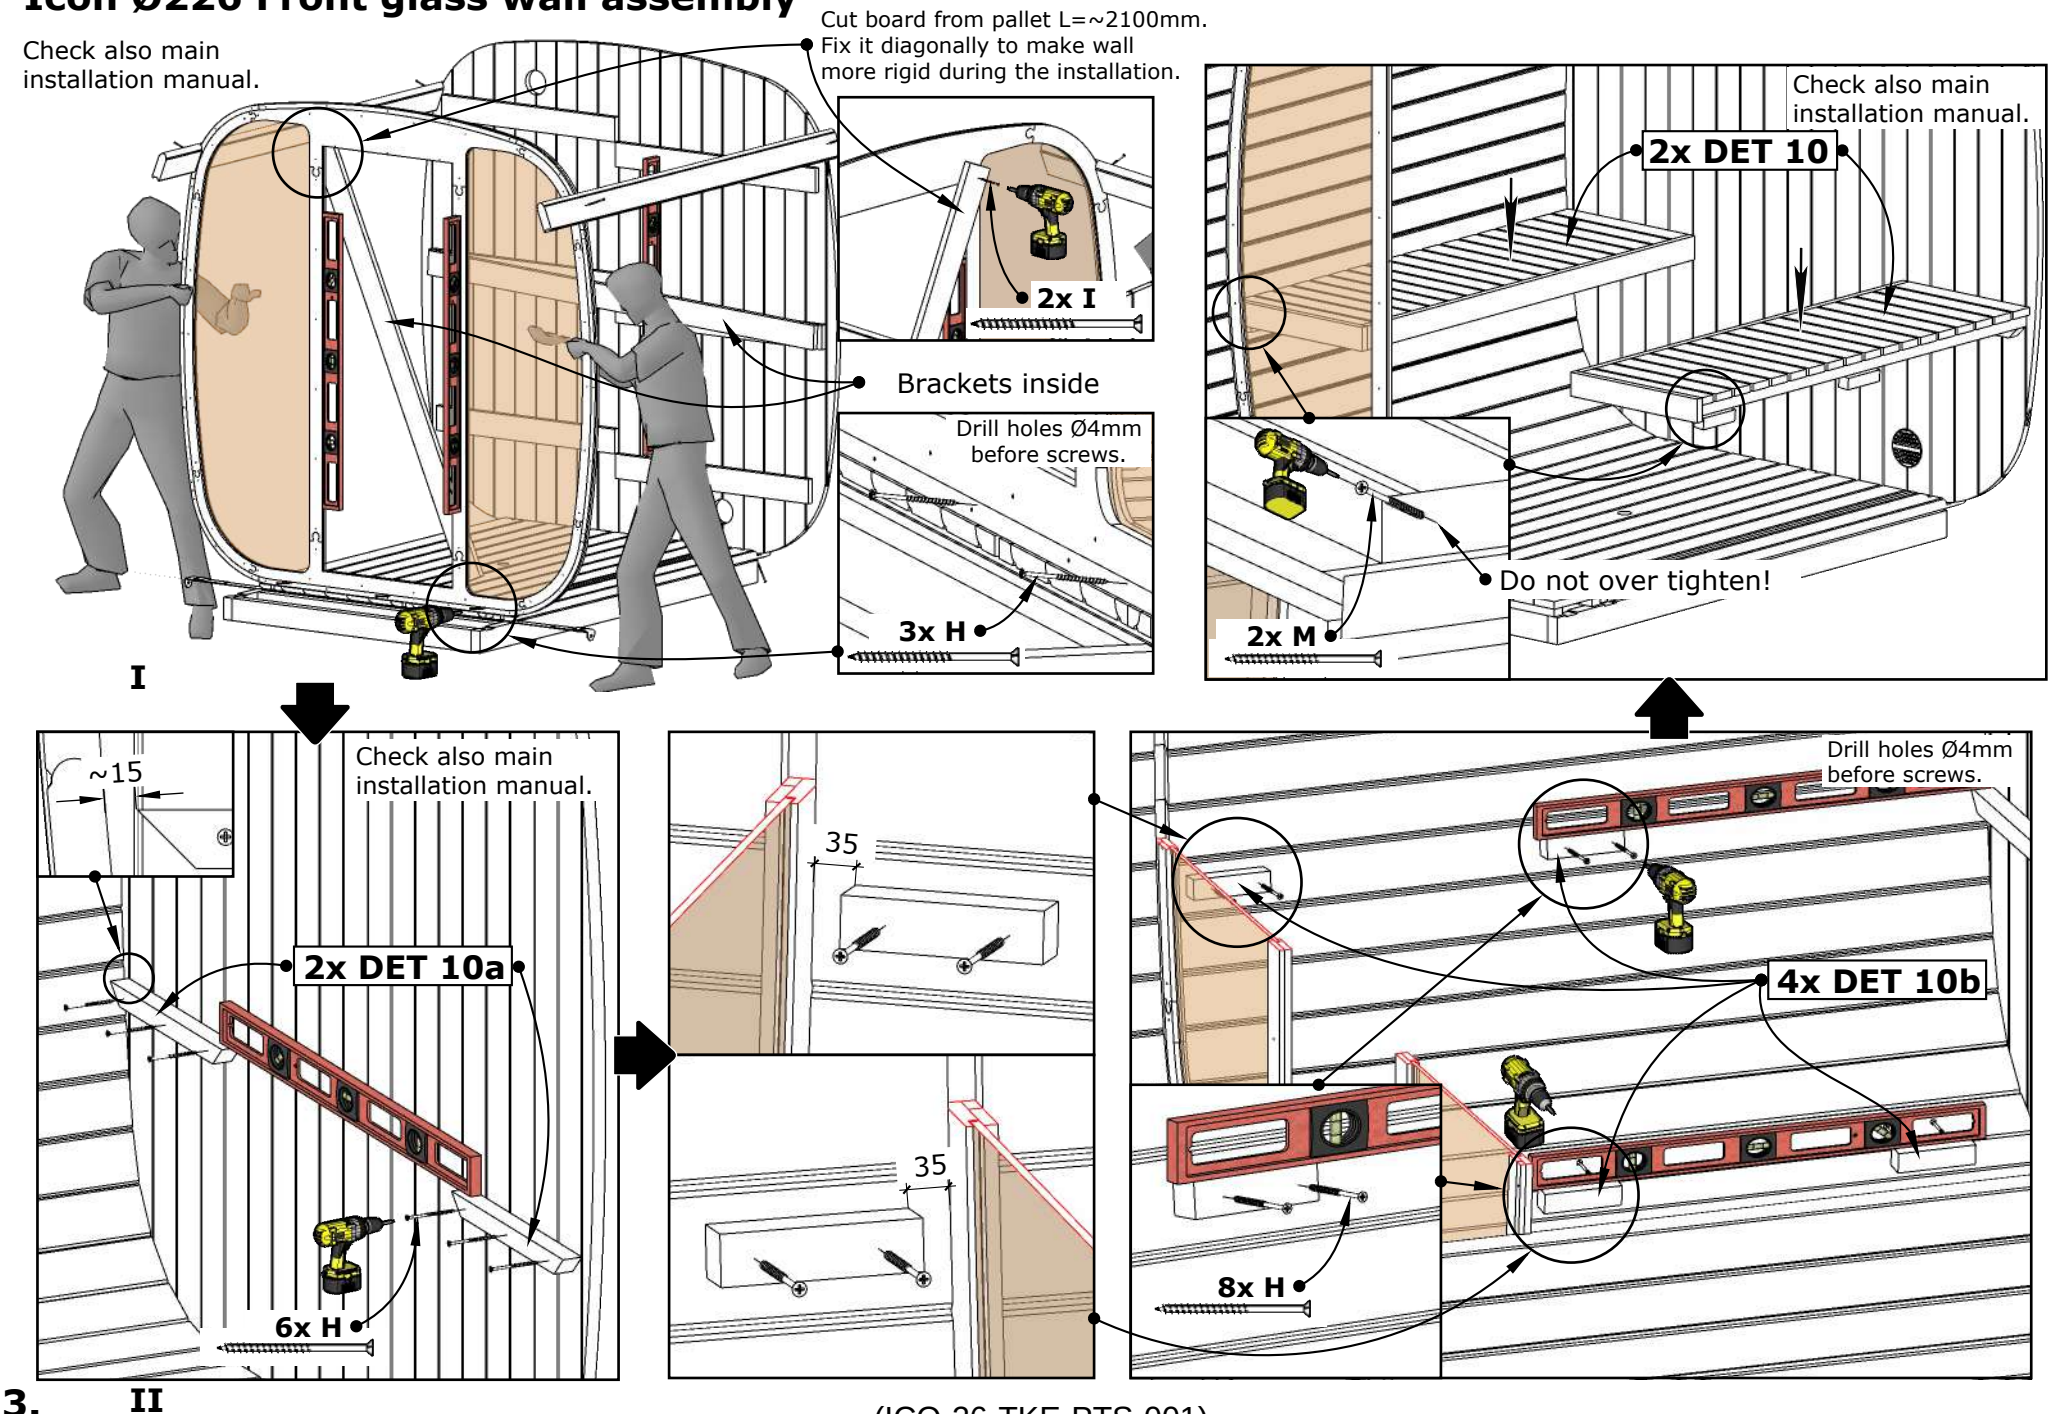

3.

Icon Ø226 Front glass wall assembly

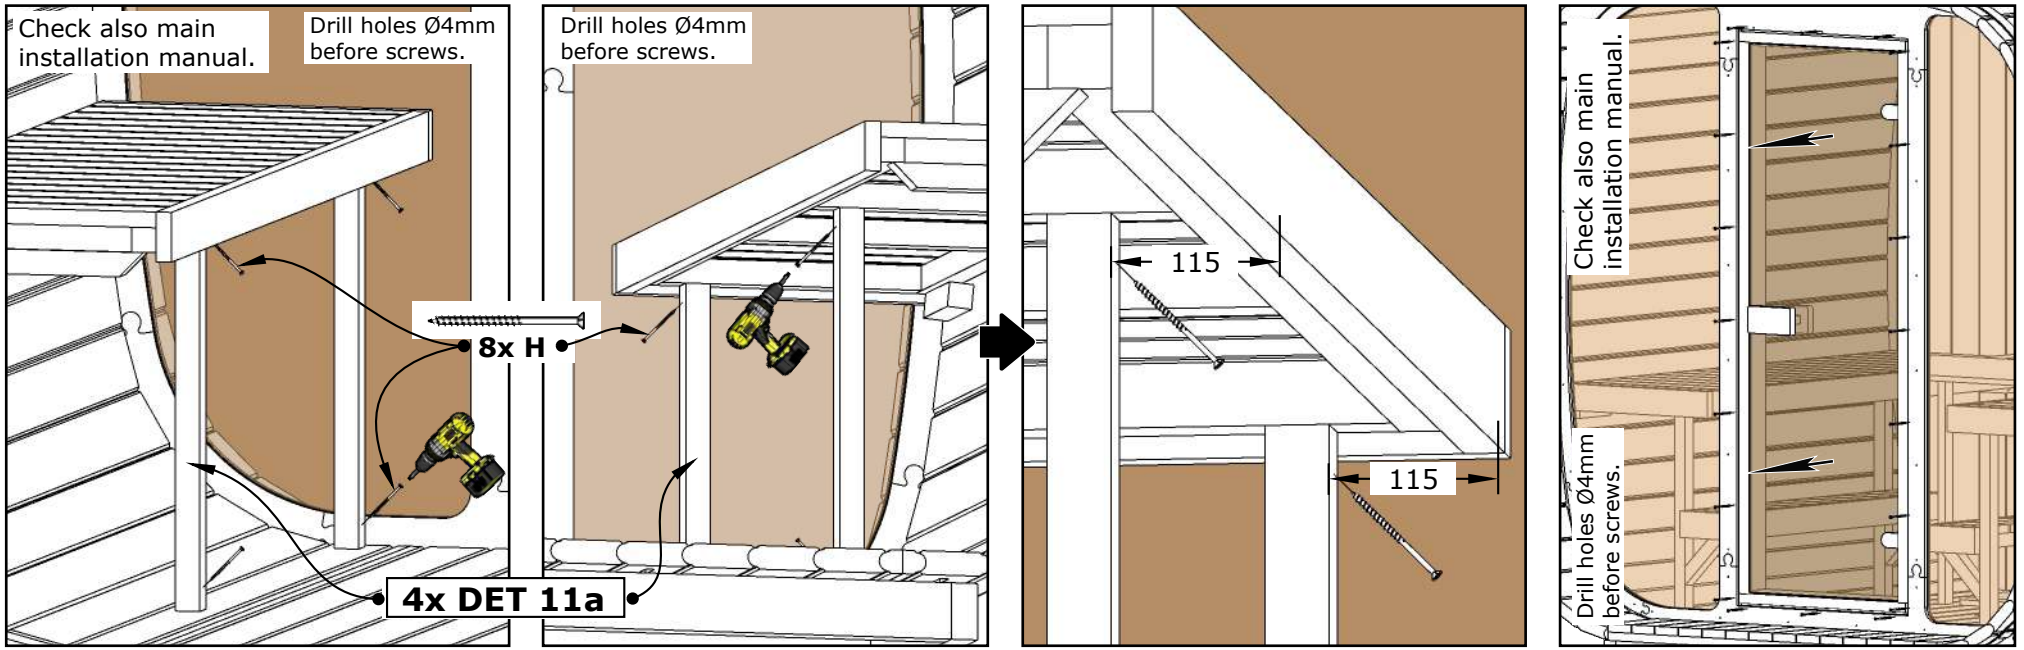

I

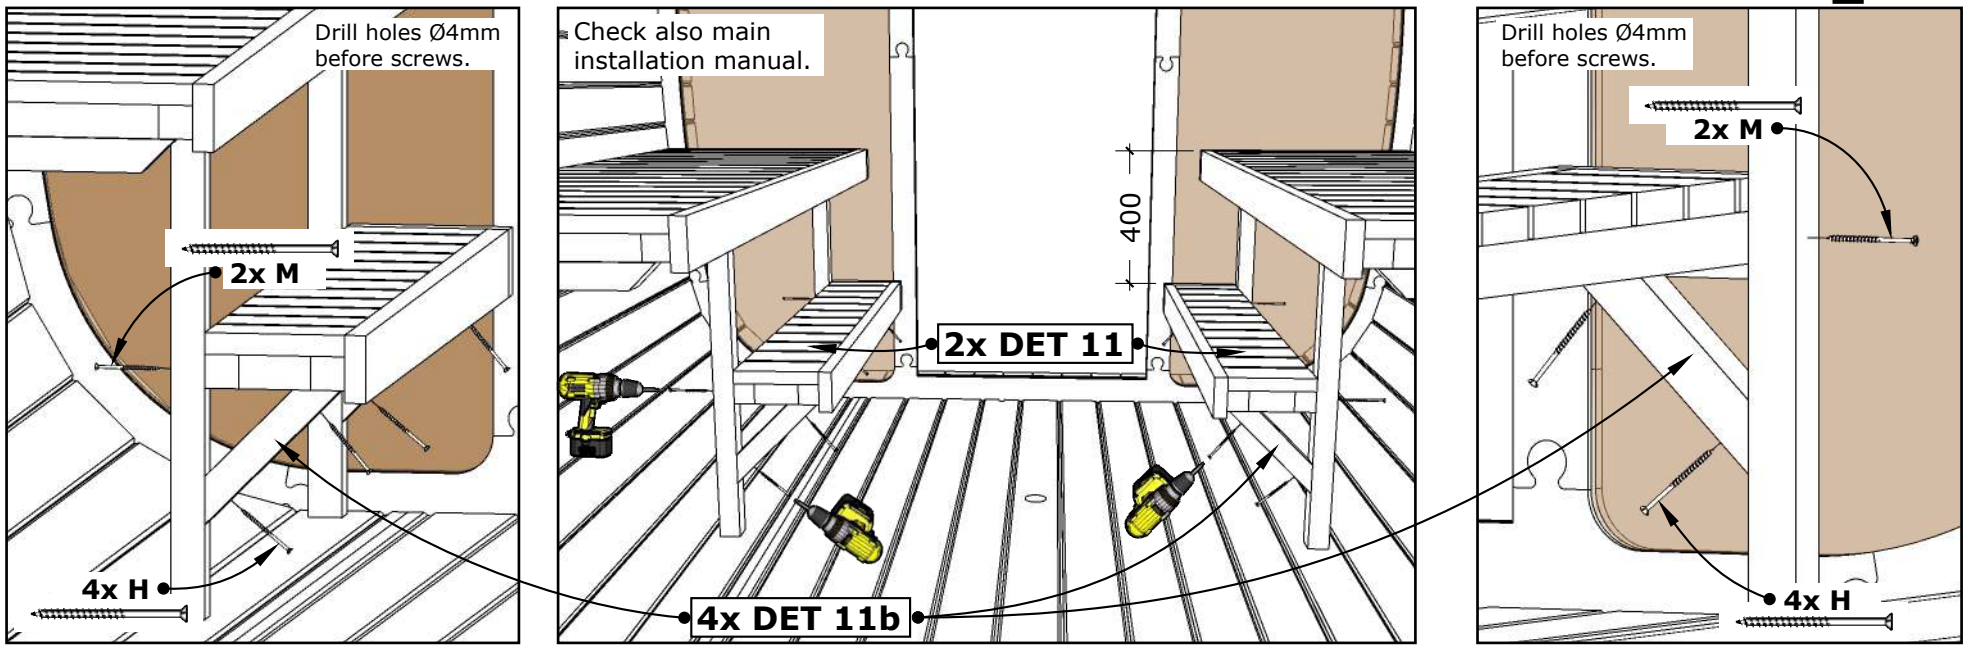

4. II

Icon Ø226 Wooden back wall assembly

Details

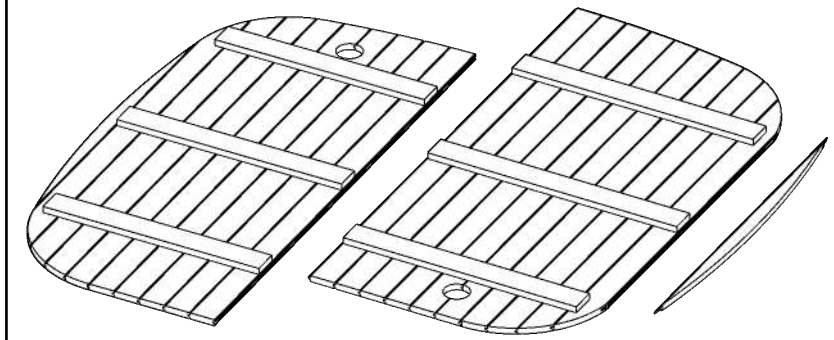

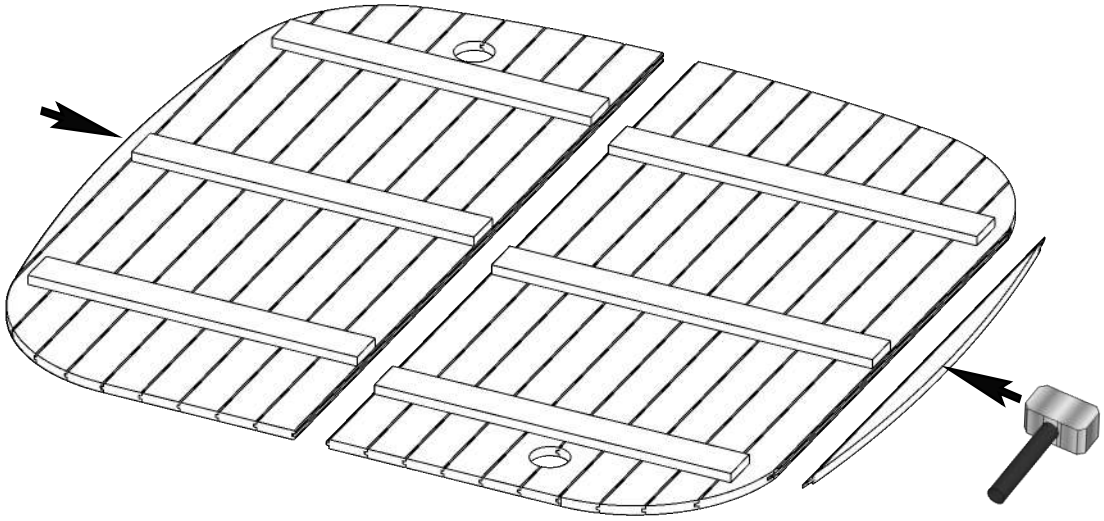

I

Cut board from pallet
L=~2100 mm.

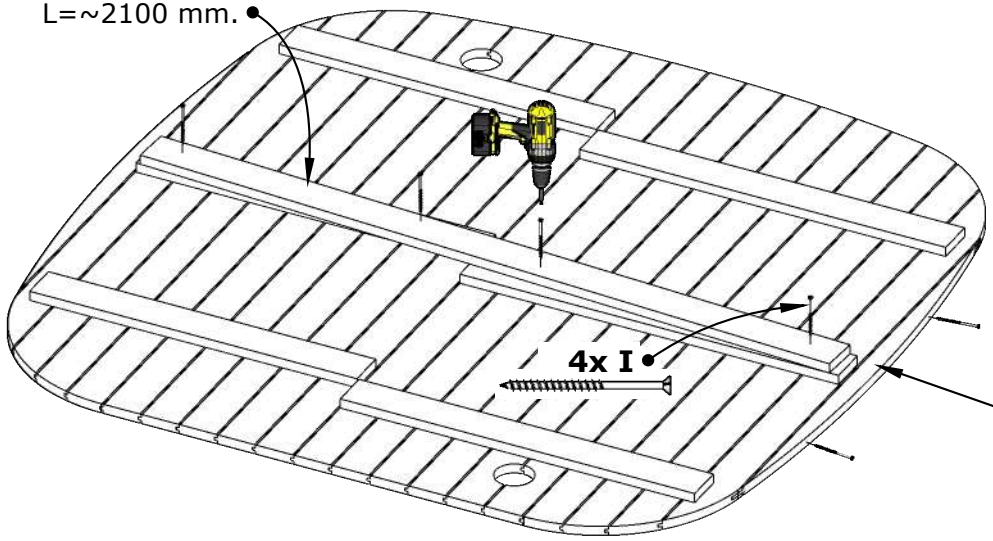

II

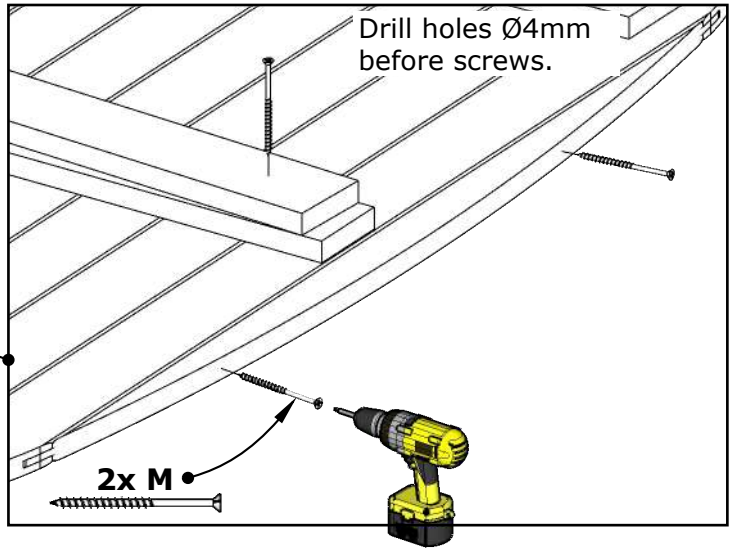

Sauna "Icon" 220,Ø226

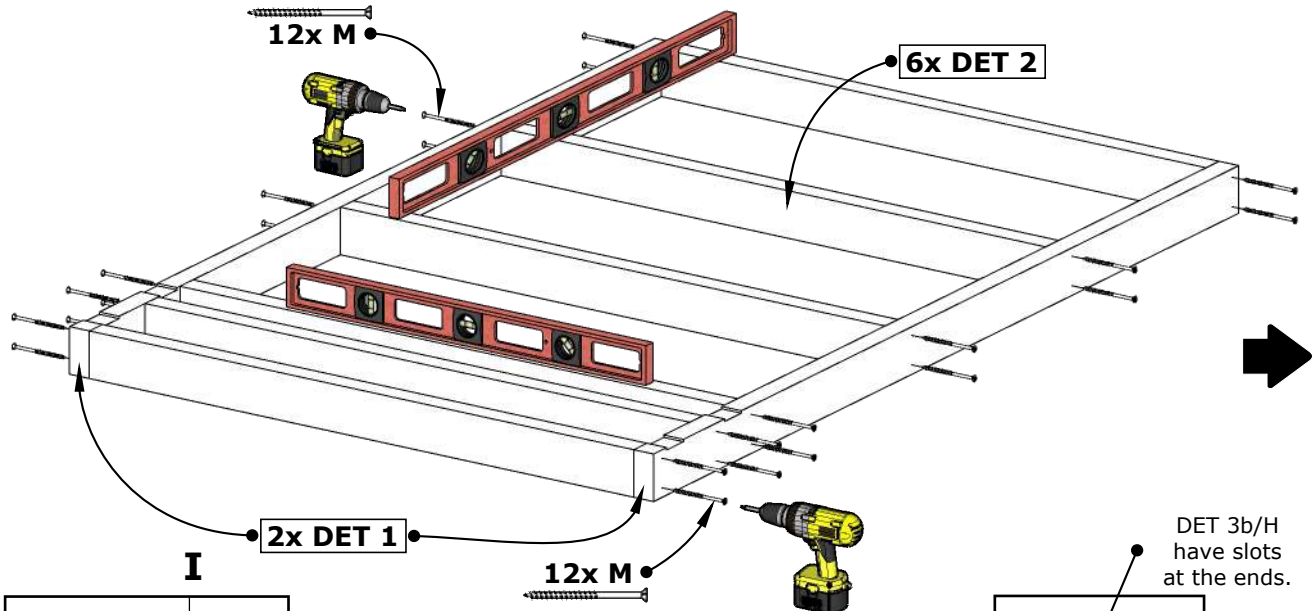

I

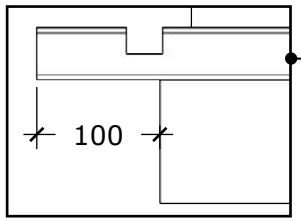

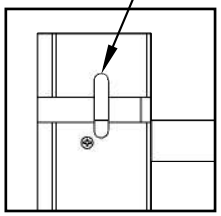

DET 3b/H have slots at the ends.

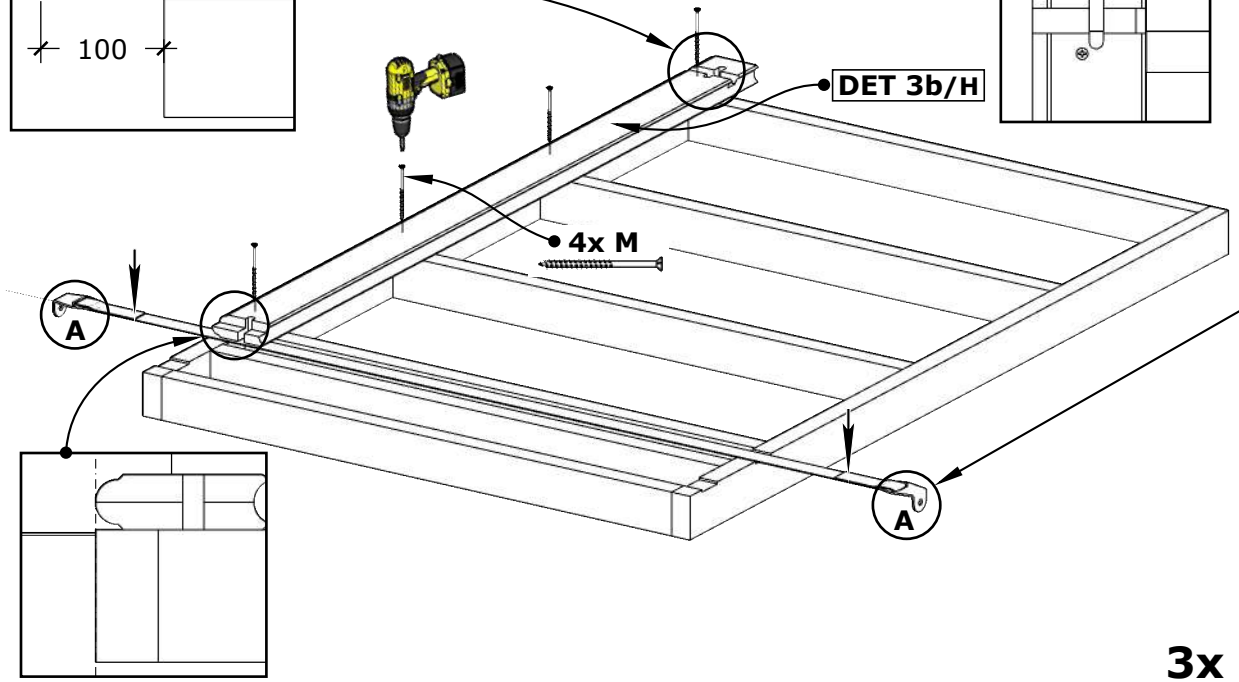

1. II

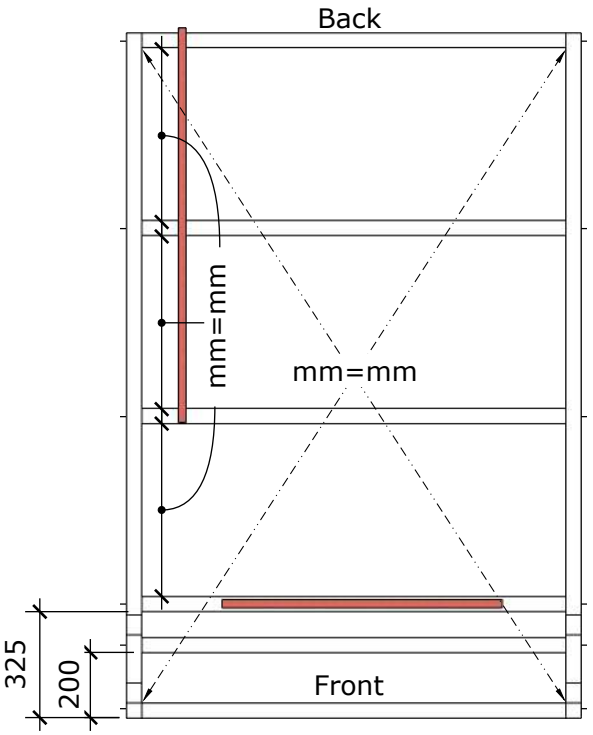

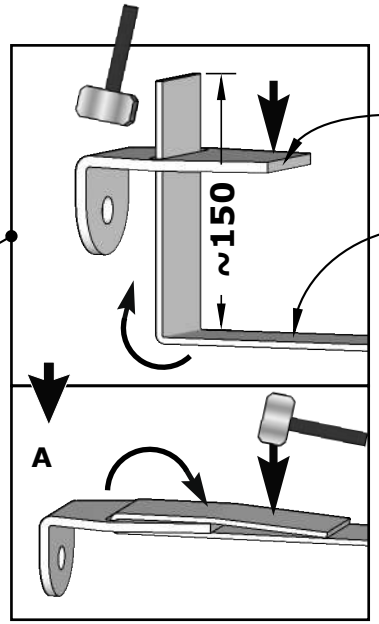

3x

Make all 3 sets, rest of them You will need later.

Sauna "Icon" 220,Ø226

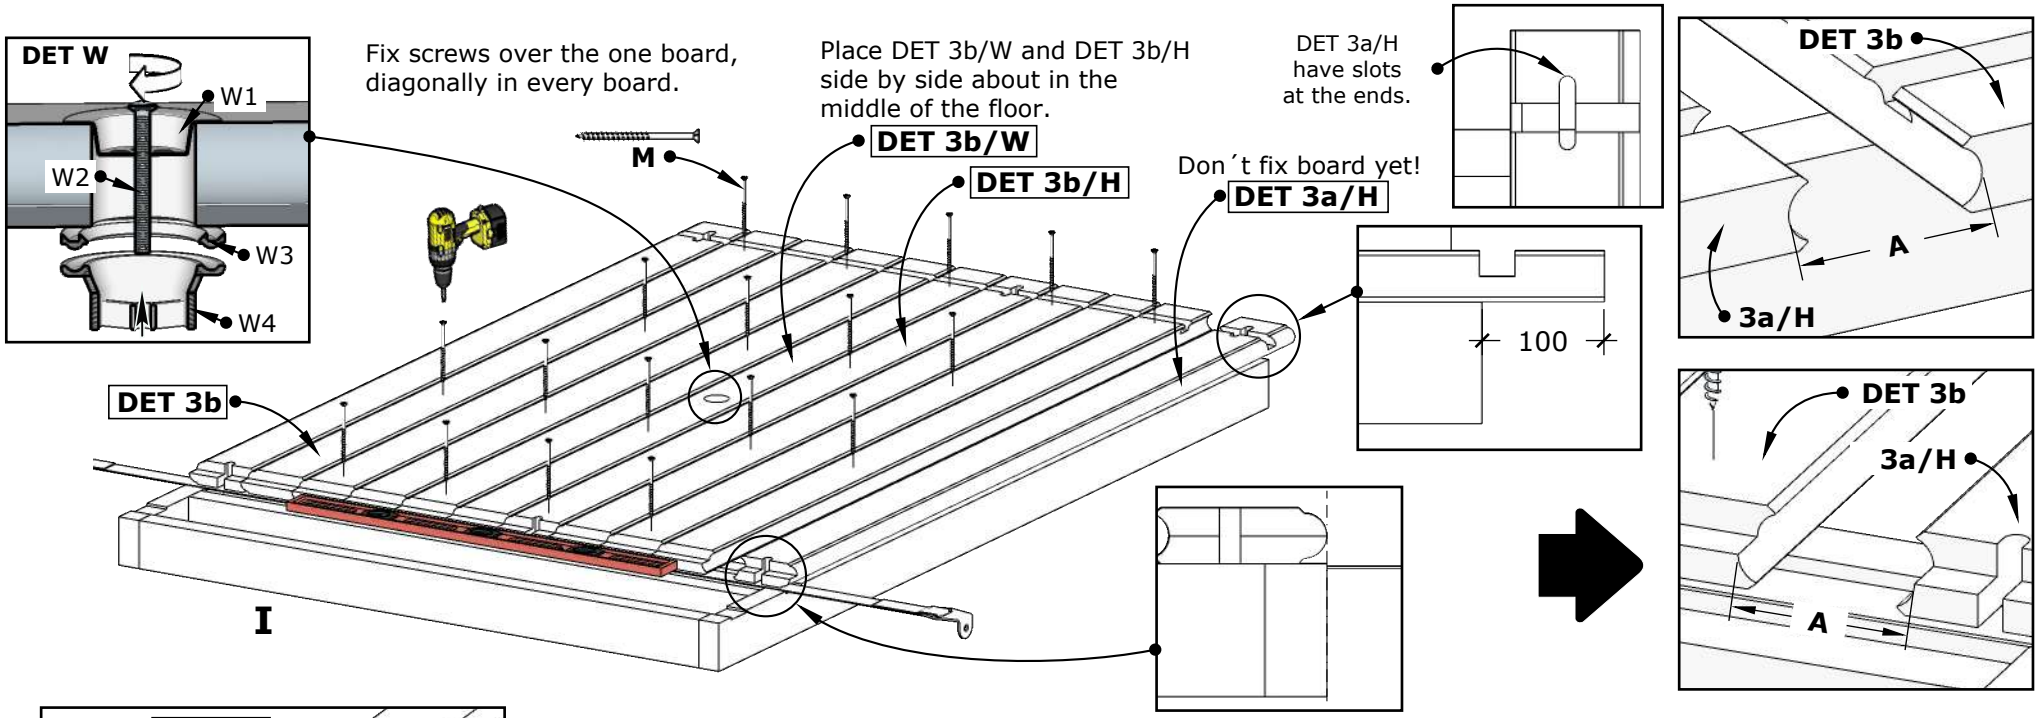

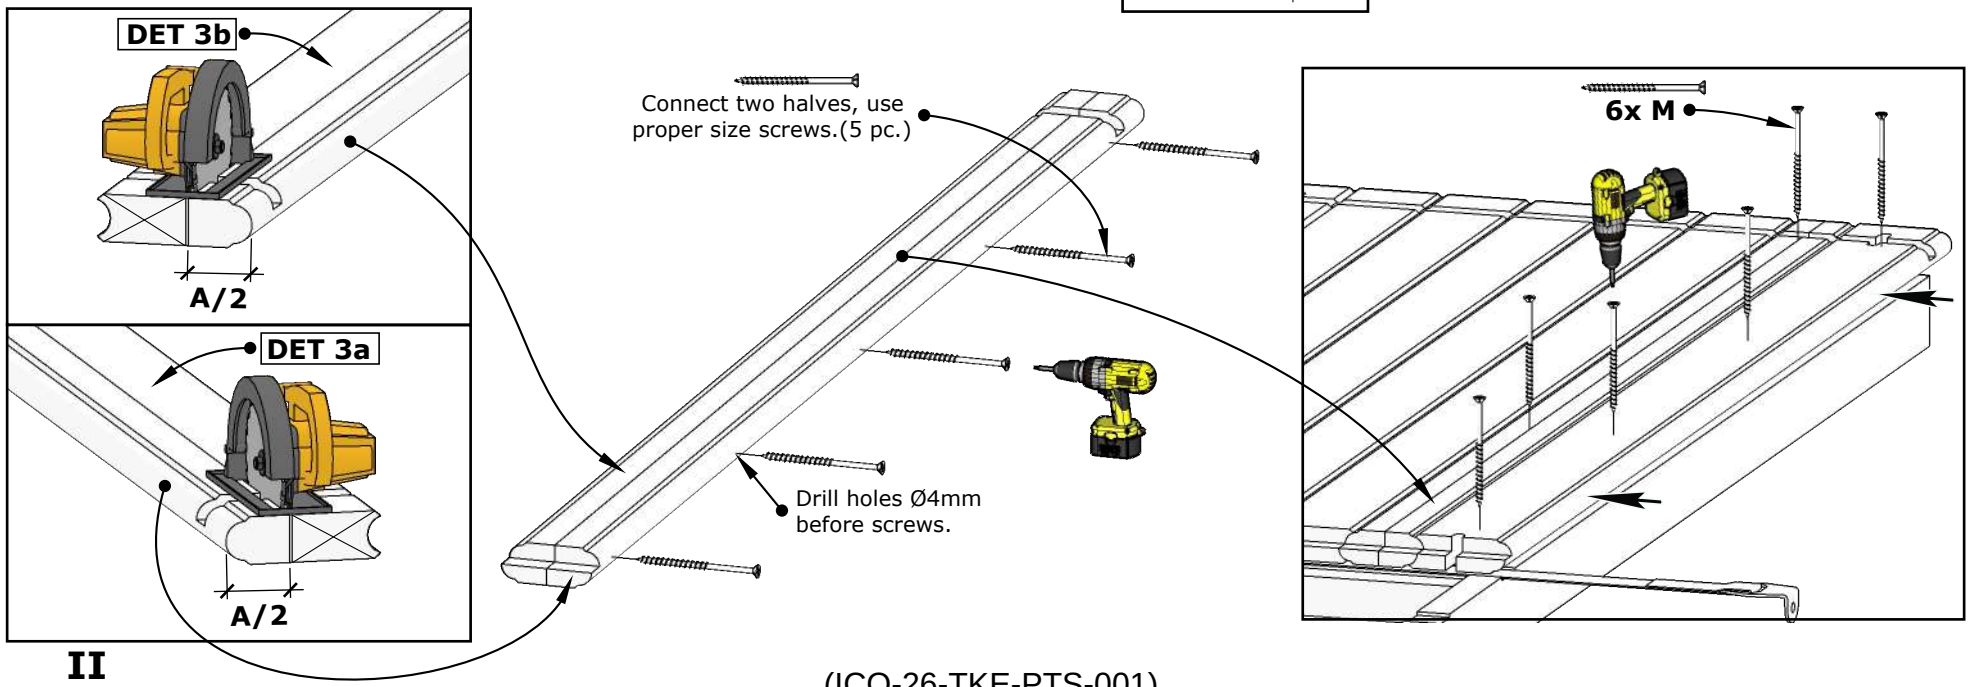

(ICO-26-TKE-PTS-001)

Sauna "Icon" 220,Ø226

Use waterlevel

Check walls installation manual on extra pages!

Sauna wall configuration depends on Your model!

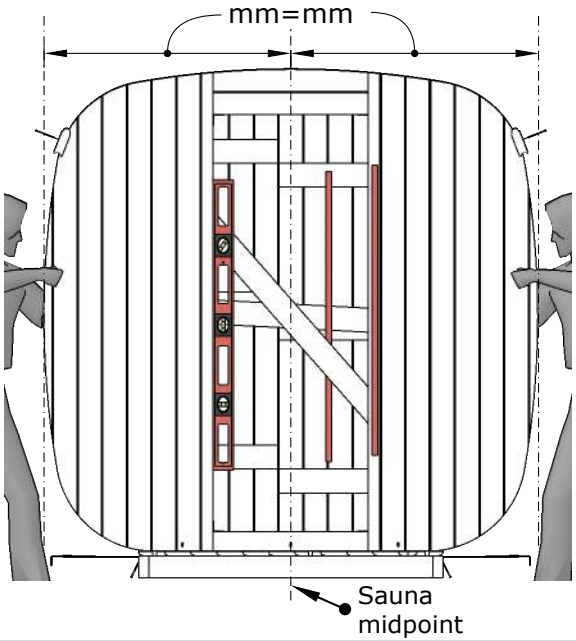

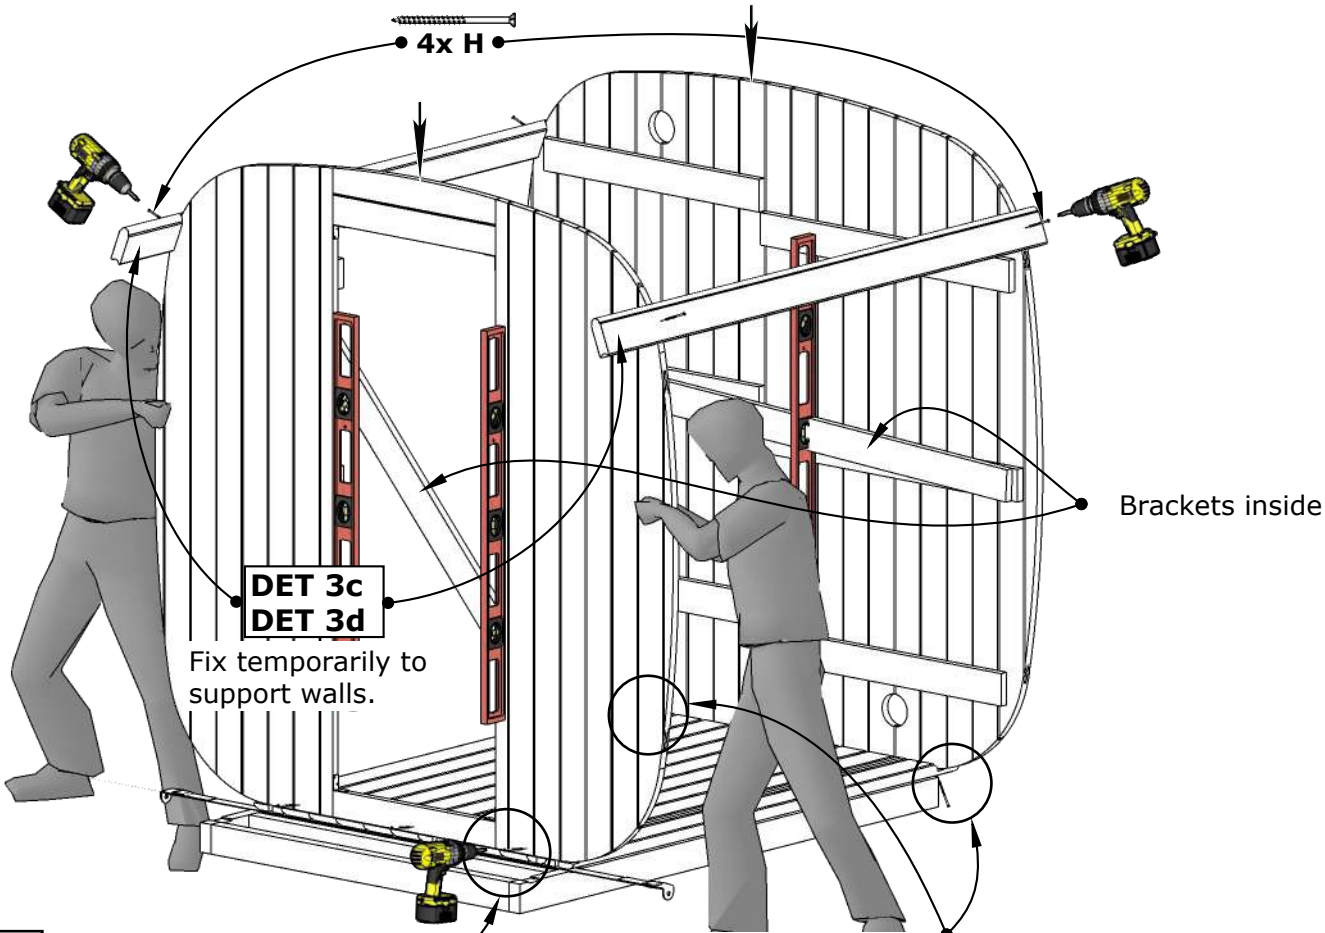

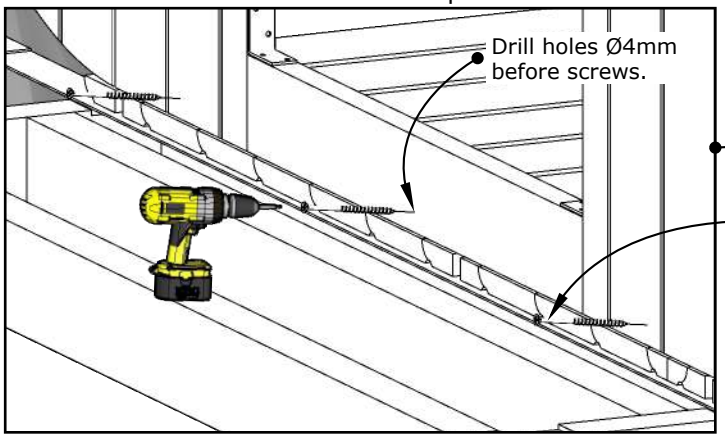

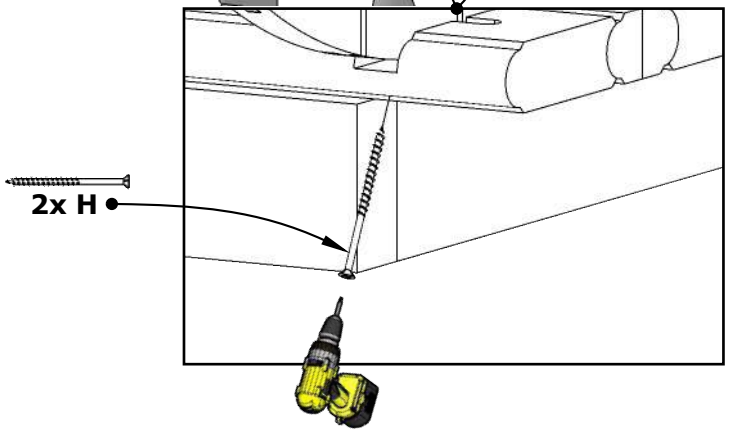

Sauna "Icon" 220,Ø226

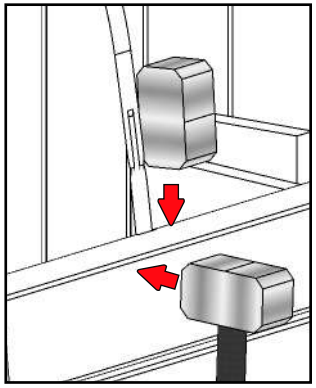

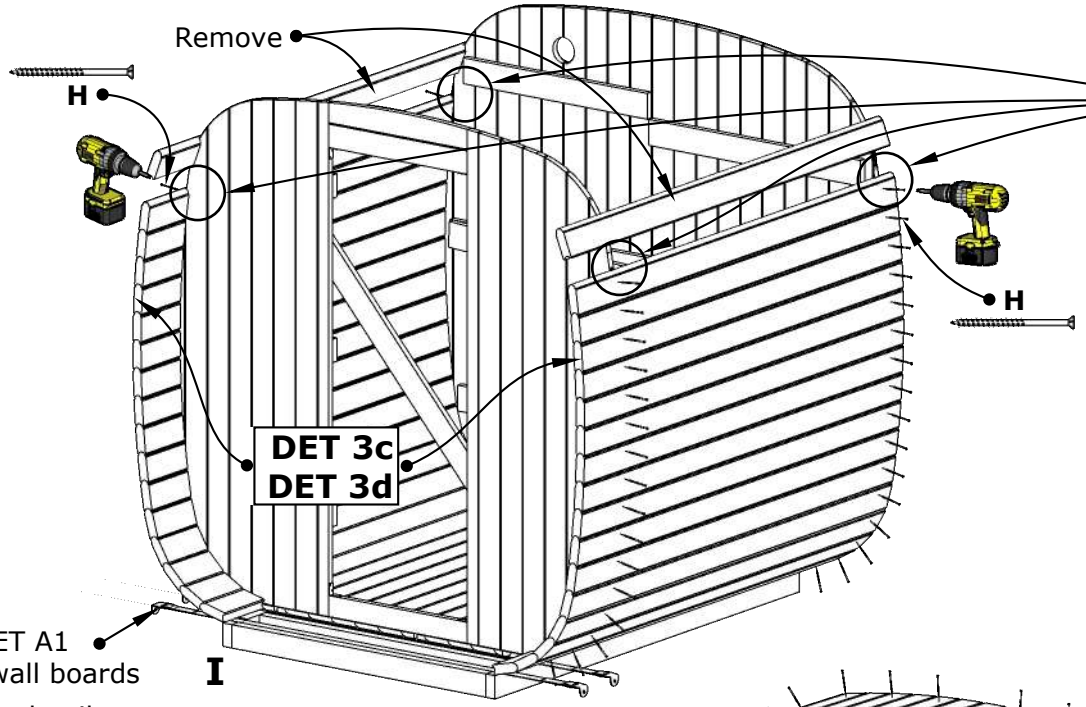

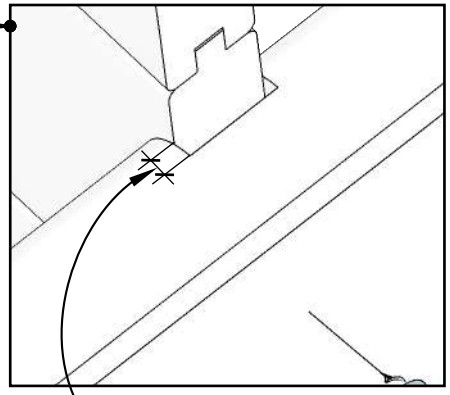

Important! Leave
the gap ~7 mm.

Place DET A1
before wall boards

I

Prepare the details as
described on Page 1.

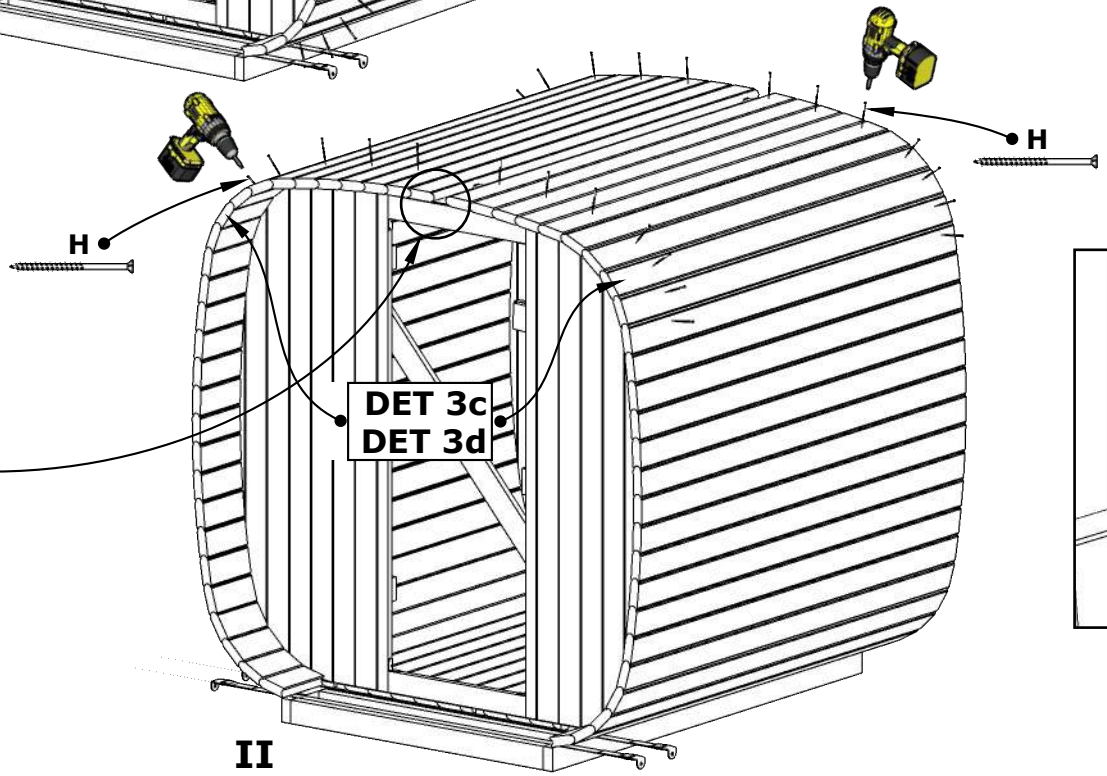

II

See the next page.

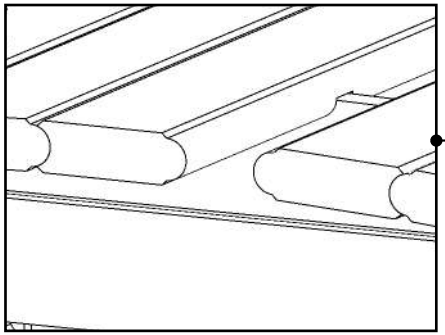

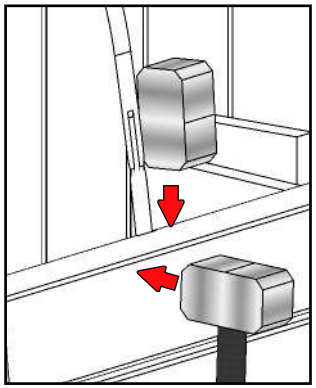

Sauna "Icon" 220,Ø226

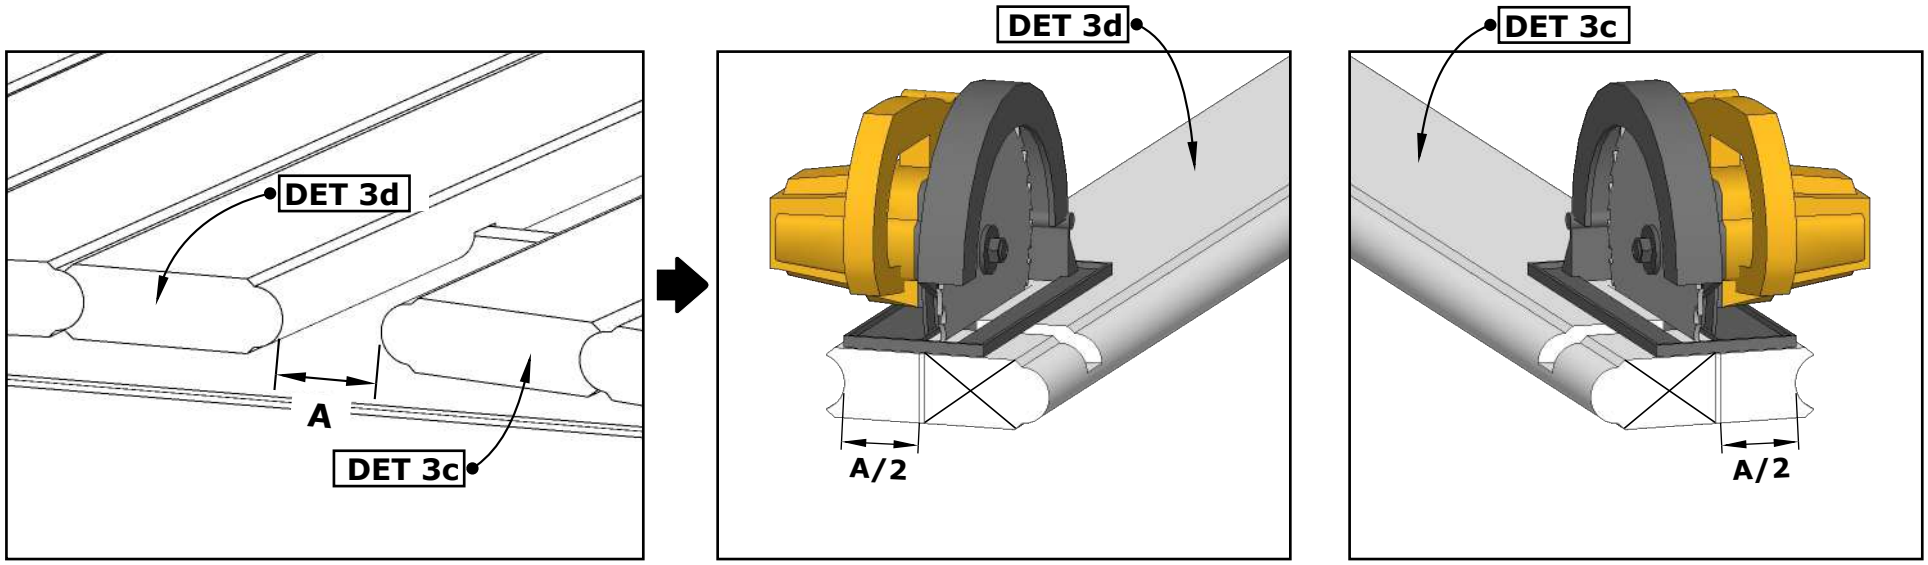

I

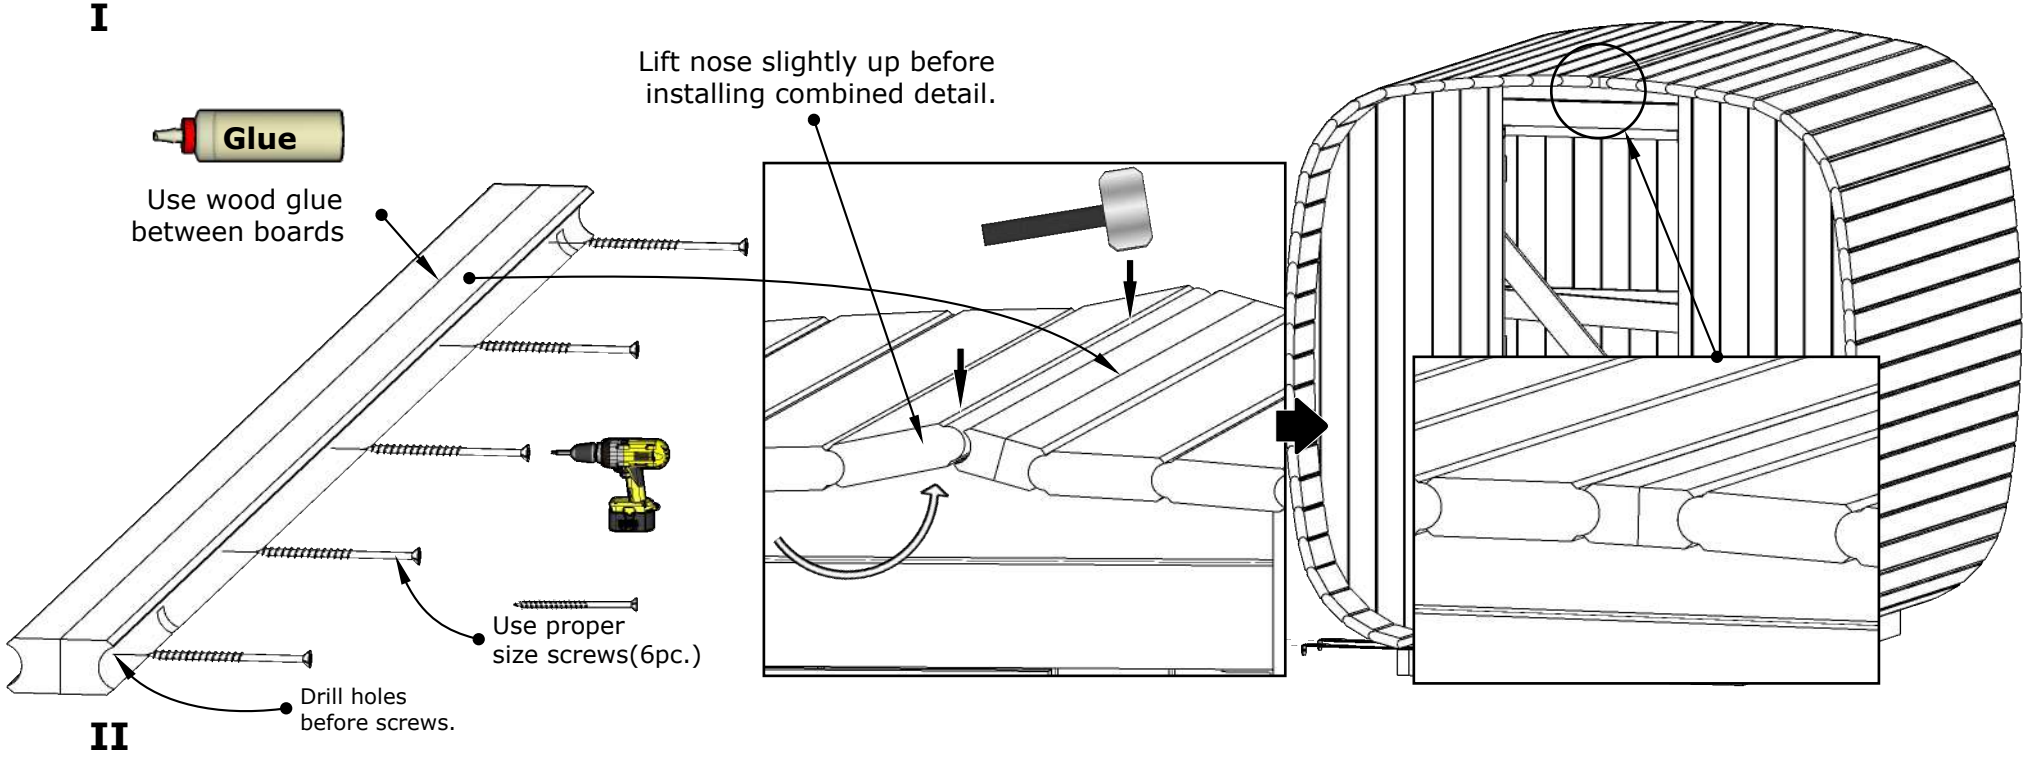

II

Sauna "Icon" 220,Ø226

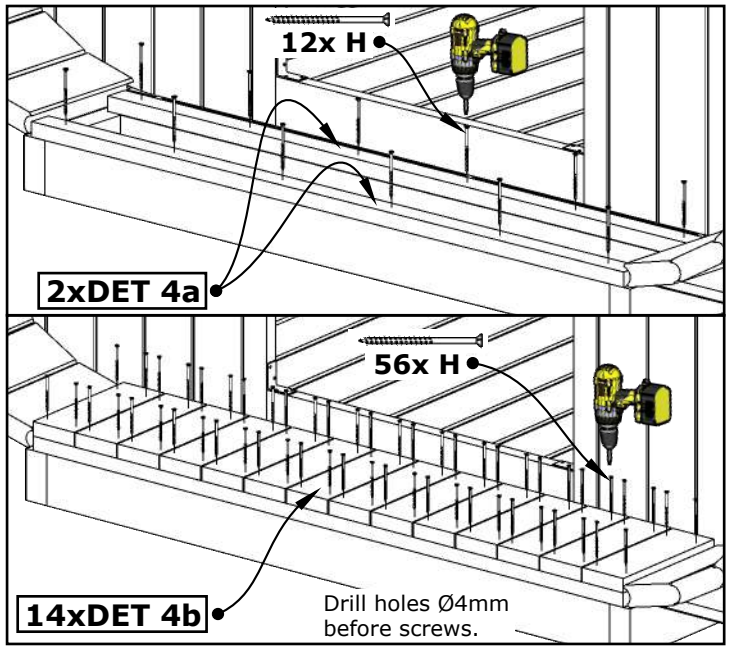

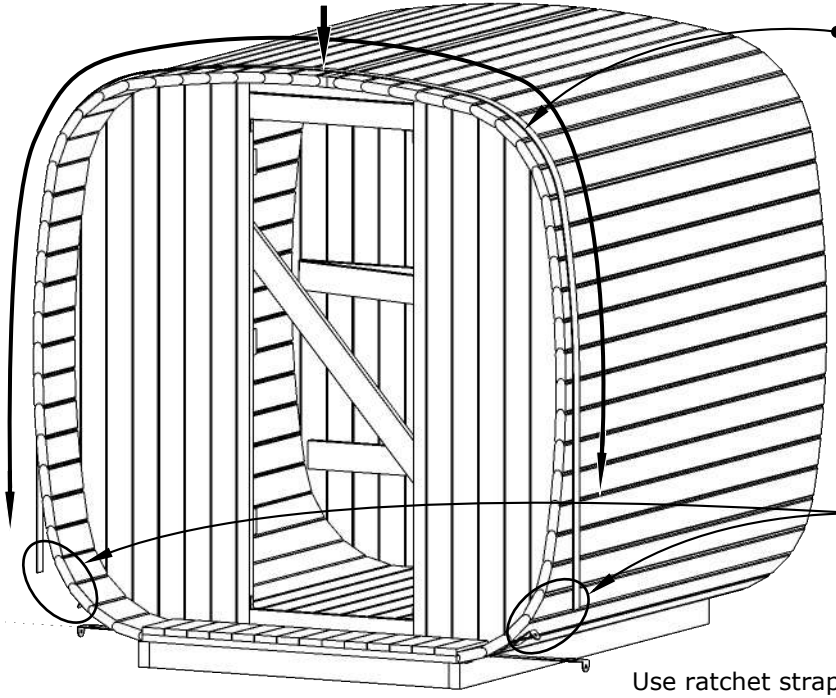

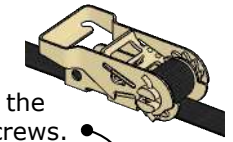

Use ratchet strap so close to the ends that You can remove screws.

I

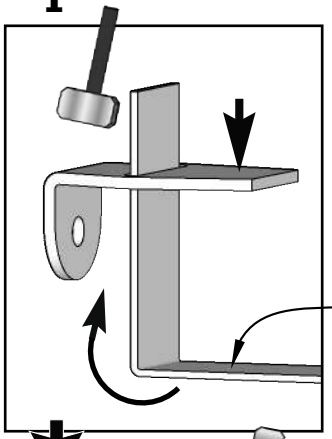

DET A2

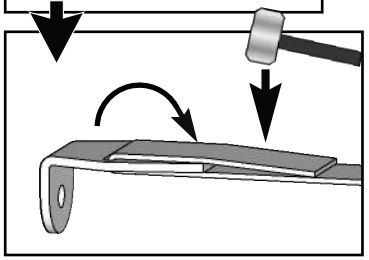

II

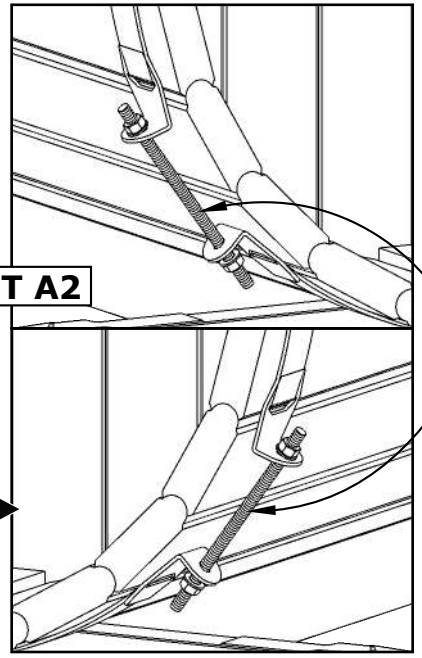

Don´t fix it very tightly yet!

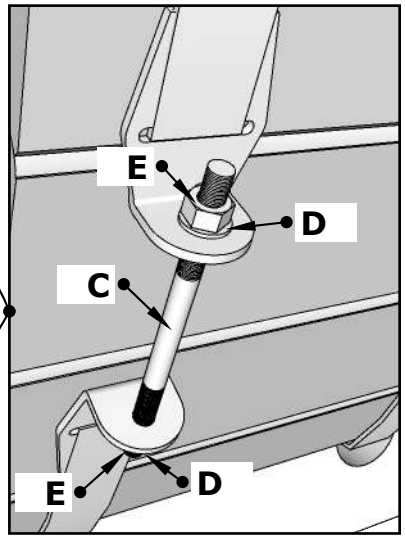

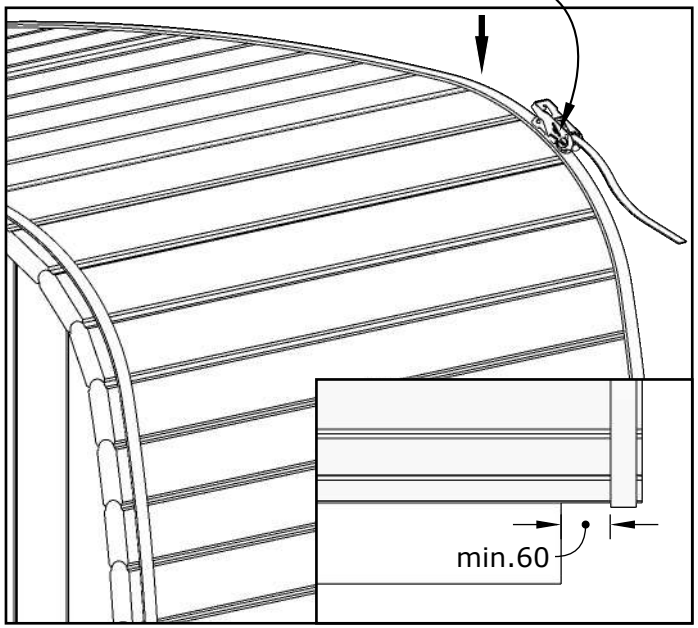

(ICO-26-TKE-PTS-001)

Sauna "Icon" 220,Ø226

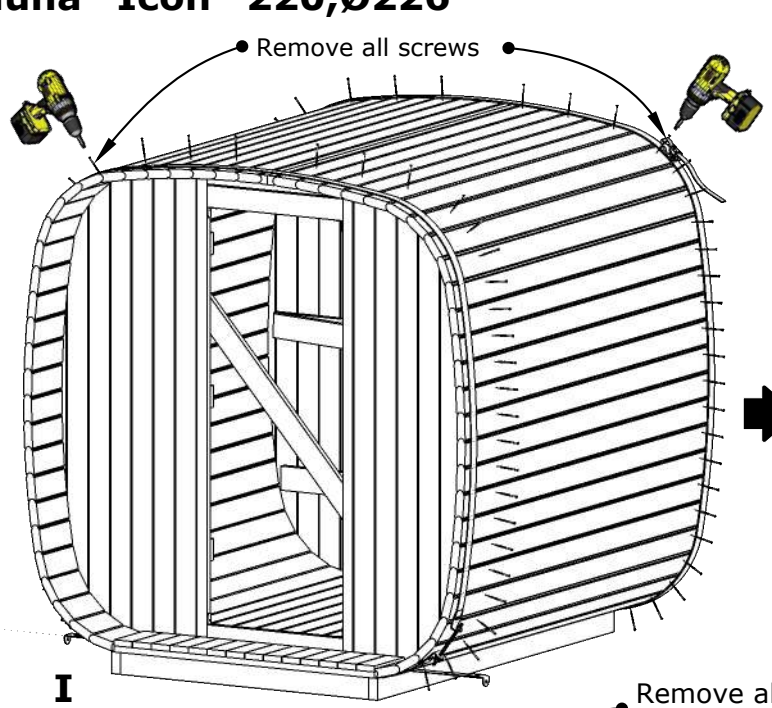

I

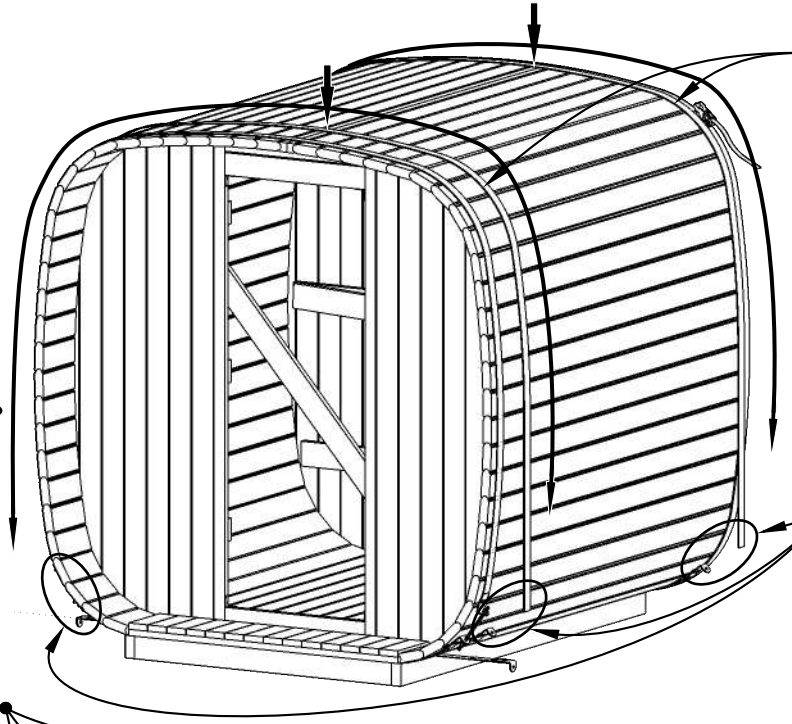

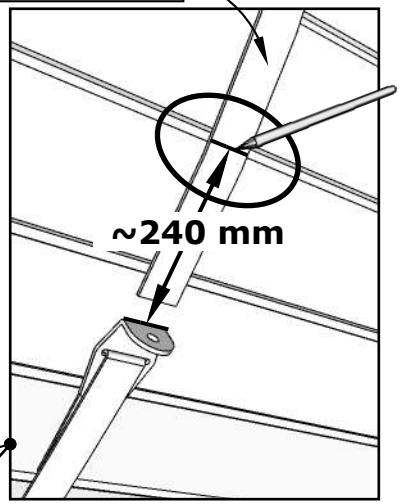

Proceed the same way as described on previous page.

Now fix all nuts tightly!
Remove ratchet strap!

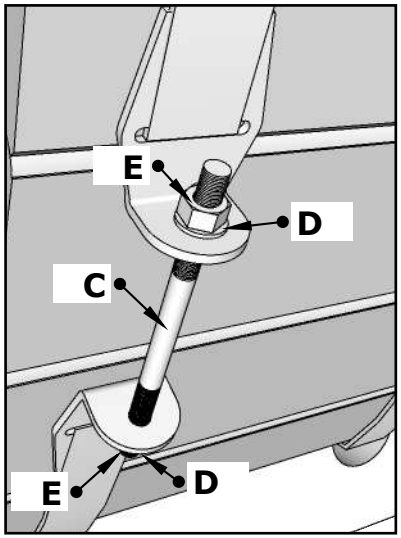

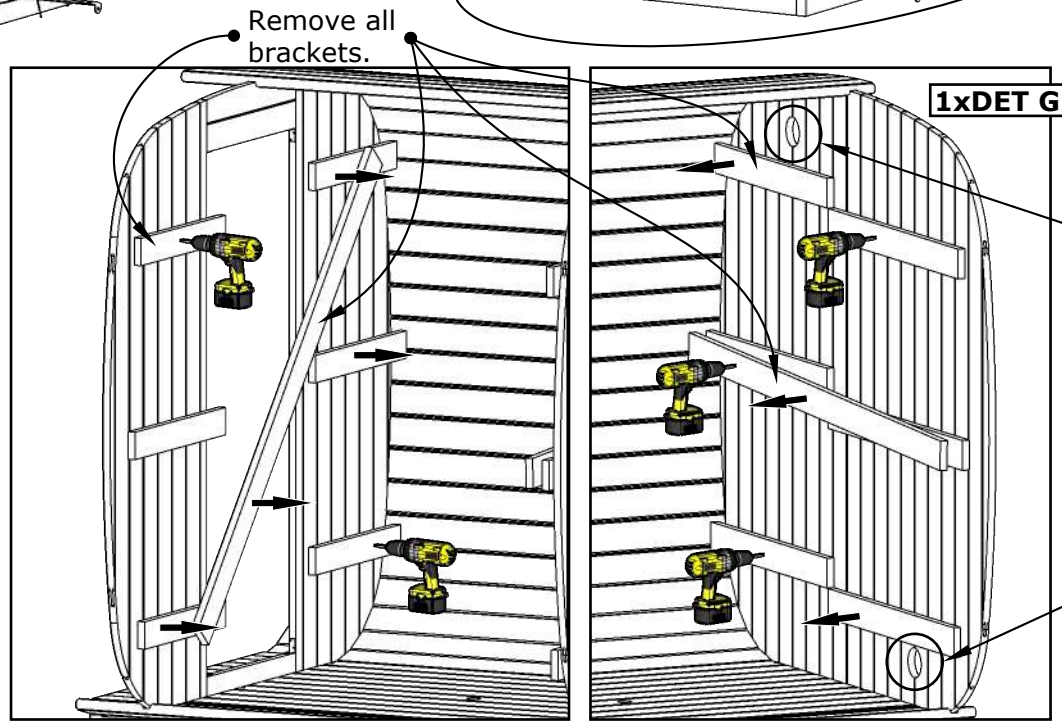

III

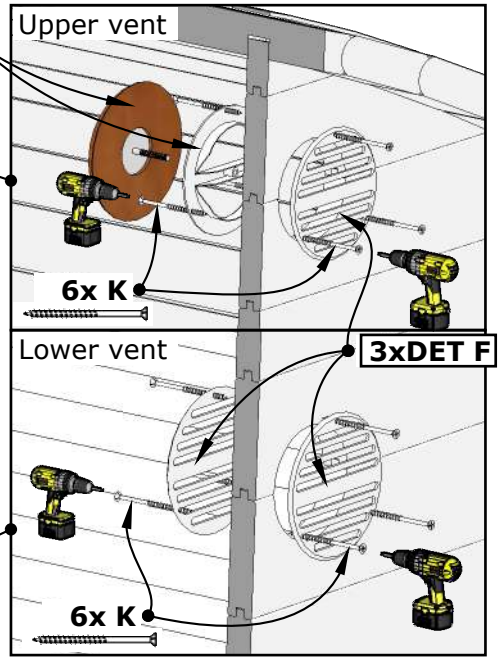

Sauna "Icon" 220,Ø226

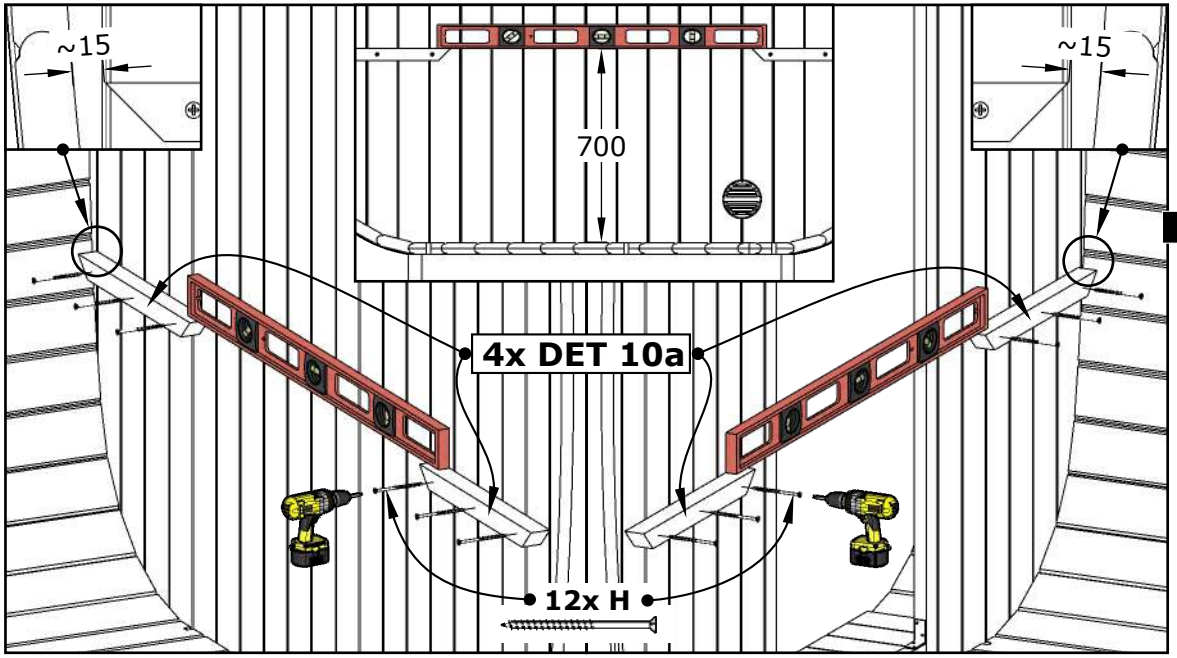

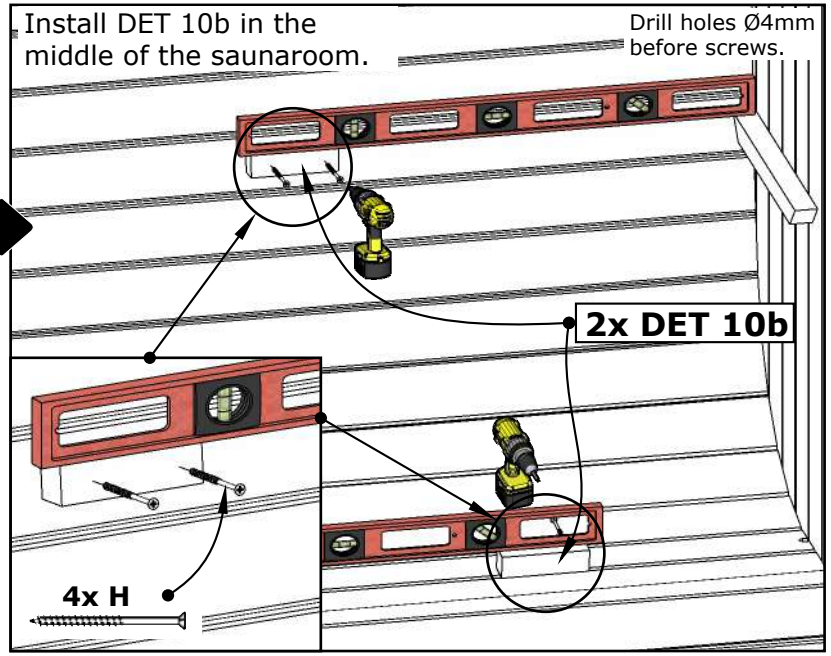

I

NB! If Your sauna equipped with front glass-wall, the sauna benches installation manual included in front glass-wall installation manual.

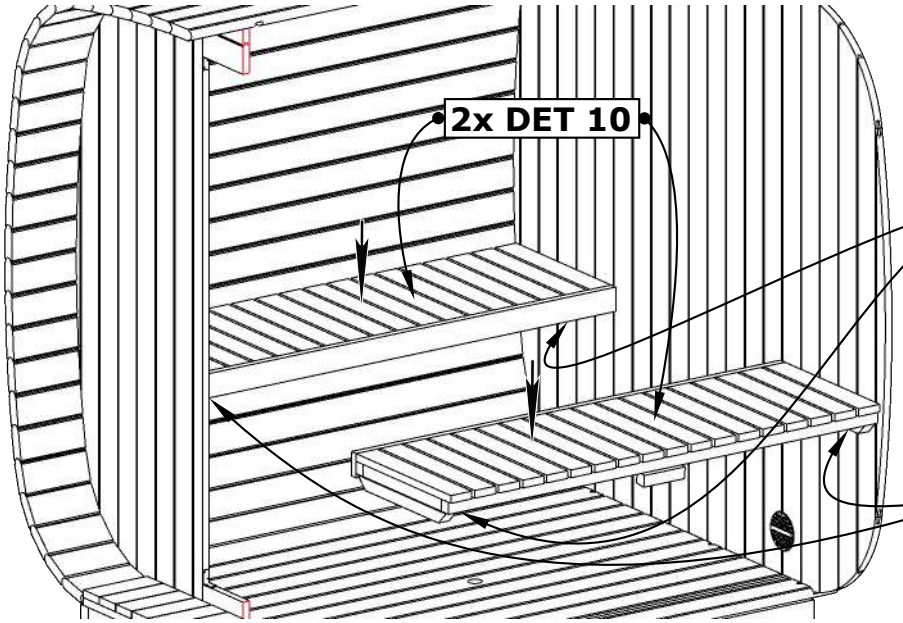

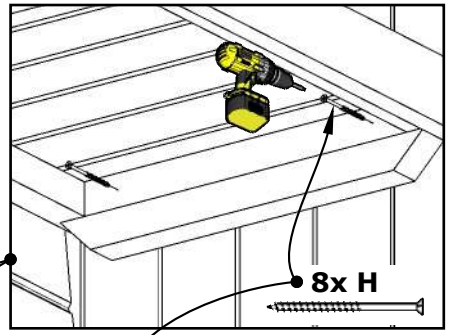

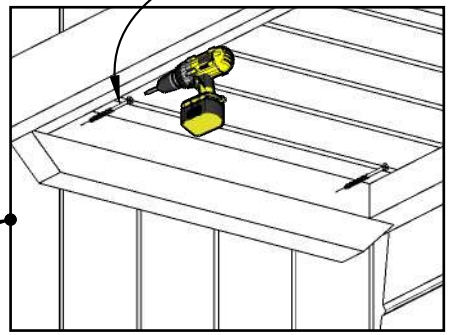

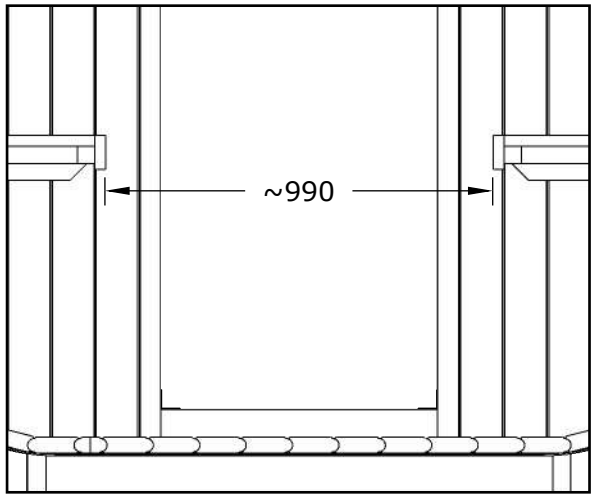

II

Sauna "Icon" 220,Ø226

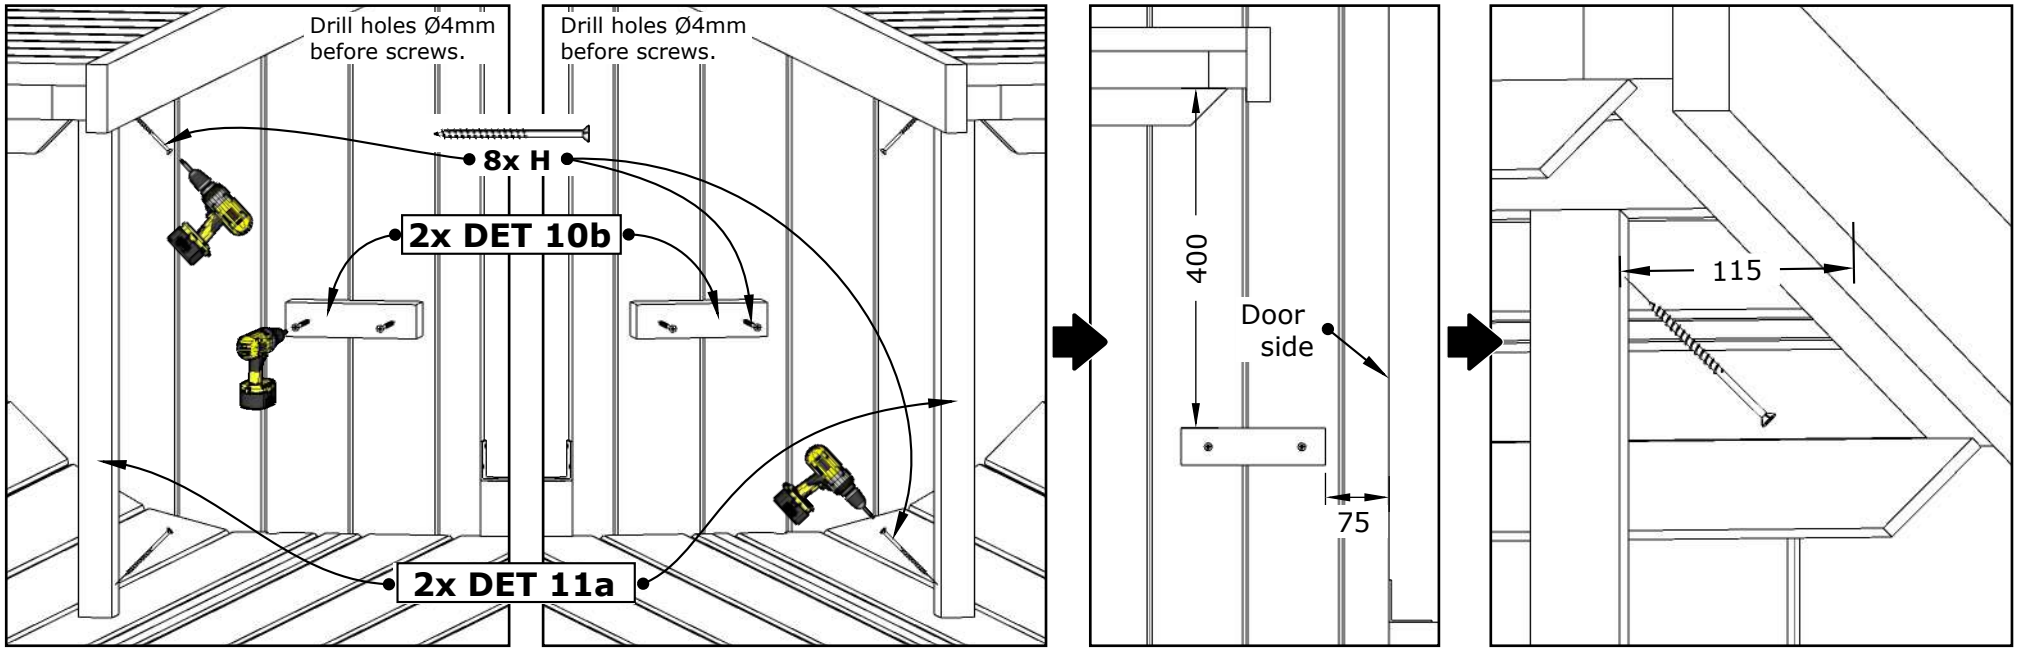

I

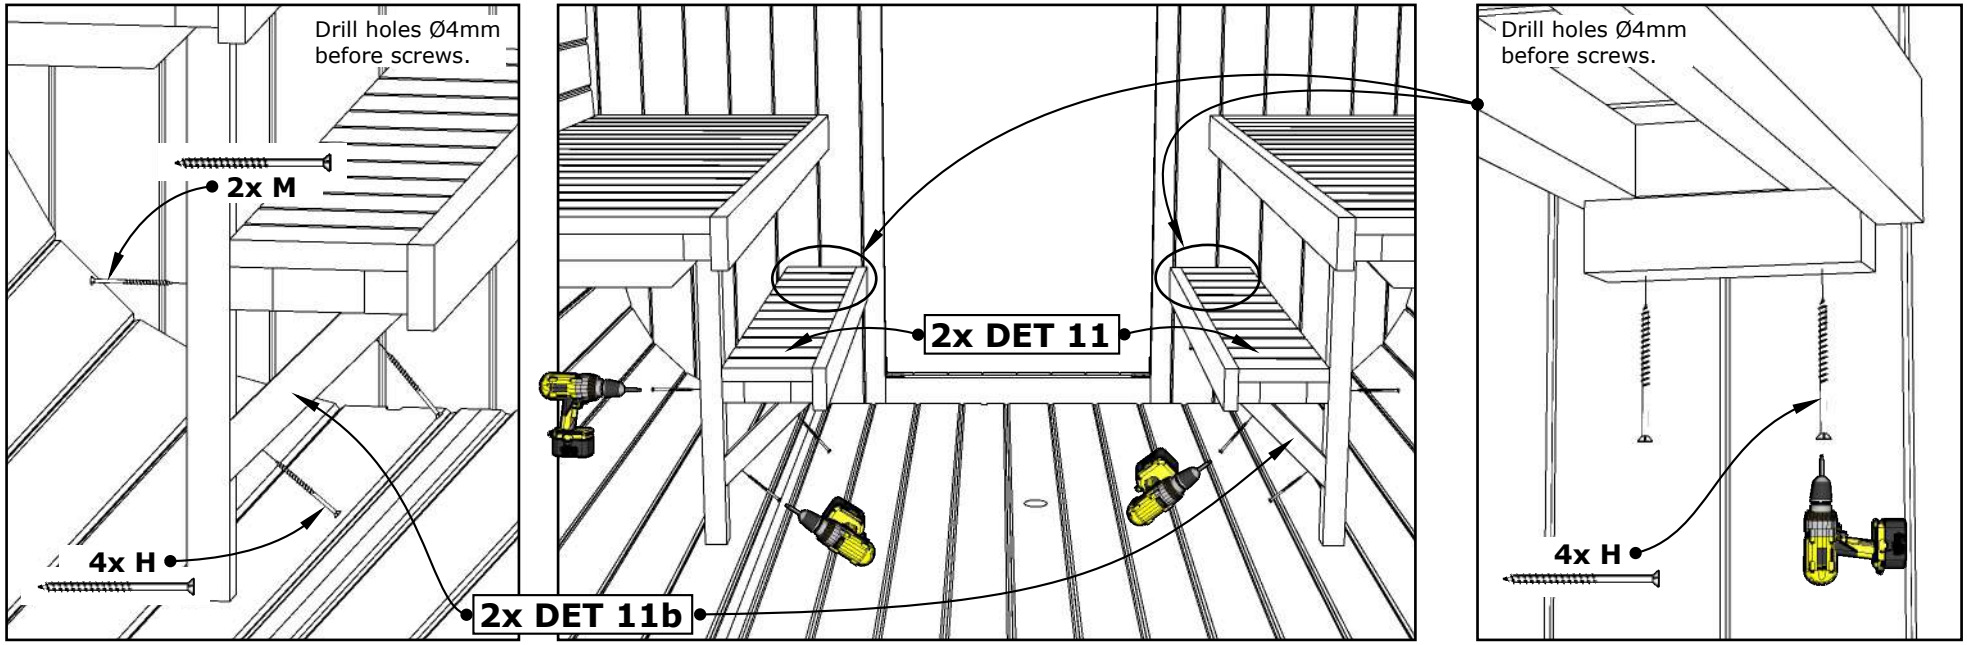

(ICO-26-TKE-PTS-001)

Sauna "Icon" 220,Ø226

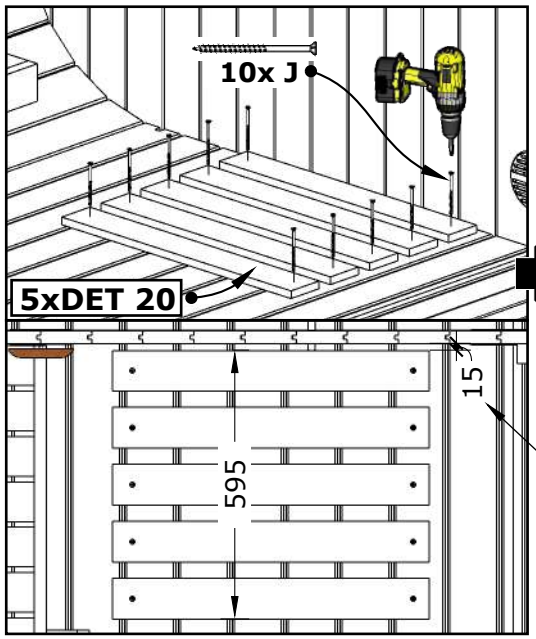

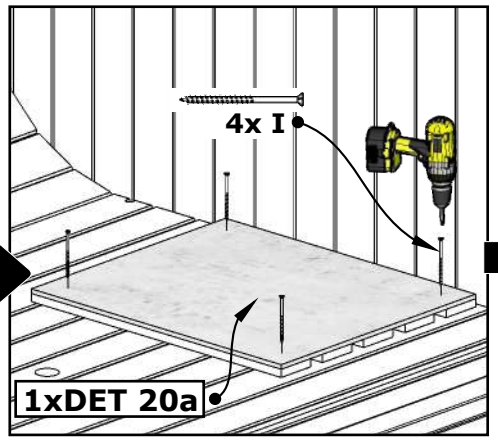

Leave the gap between board and wall.

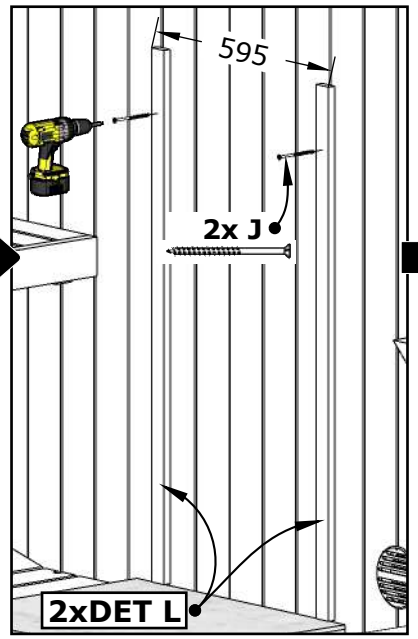

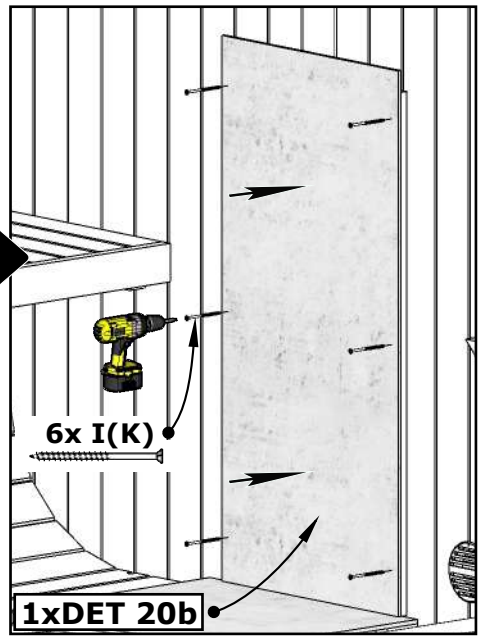

If Your sauna equipped with electrical heater, fix **DET 12 b** directly to the wall without **DET L**. Then use screws **K**.

I

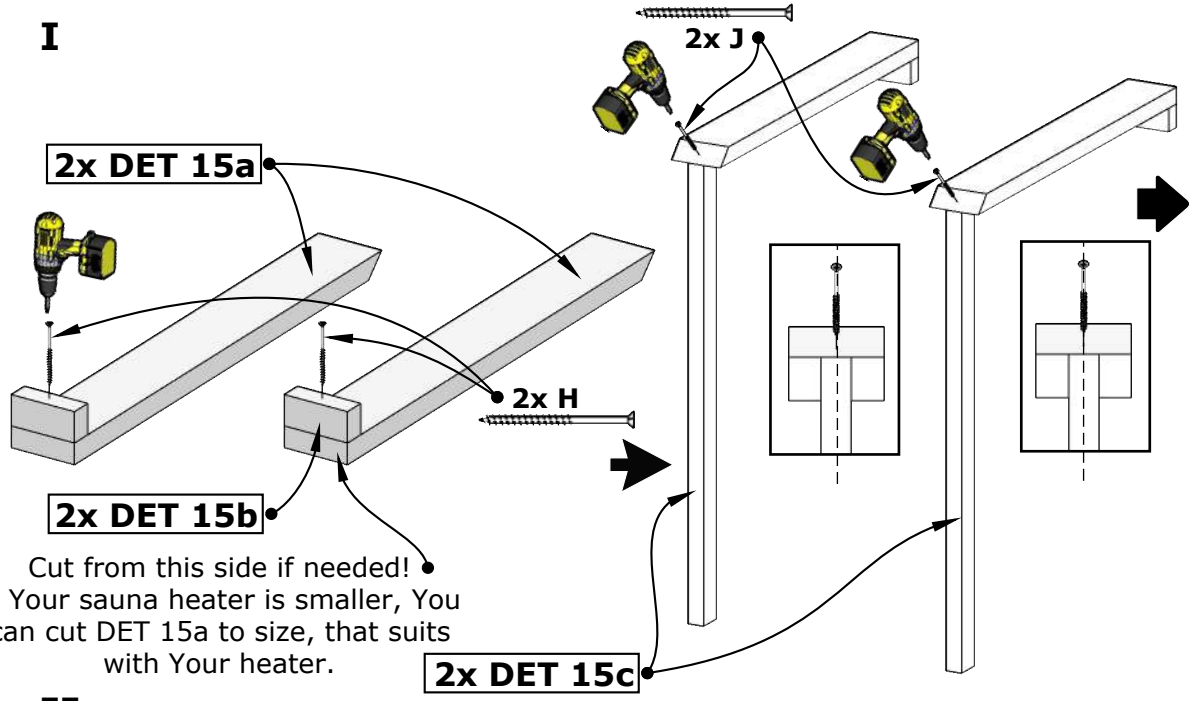

Cut from this side if needed!
If Your sauna heater is smaller, You can cut DET 15a to size, that suits with Your heater.

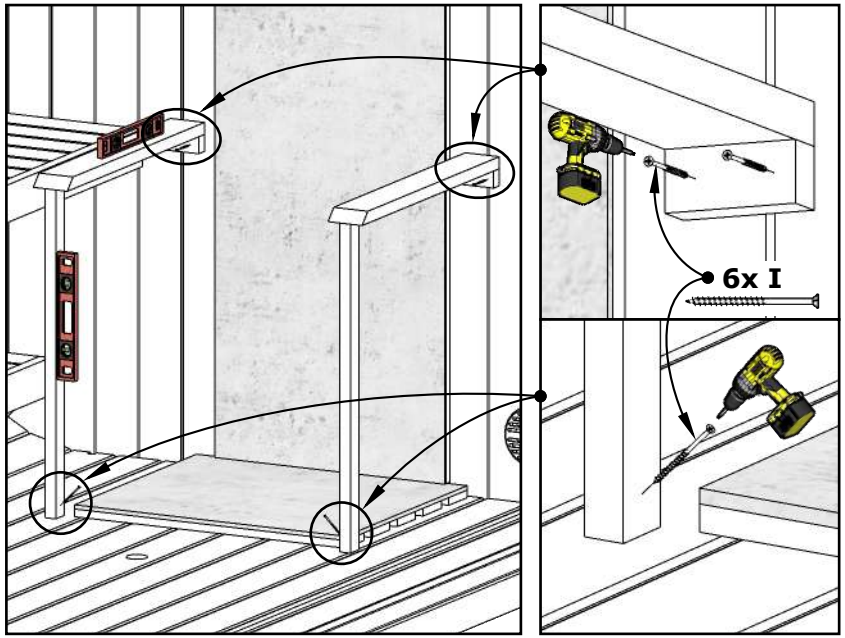

II

Sauna "Icon" 220,Ø226

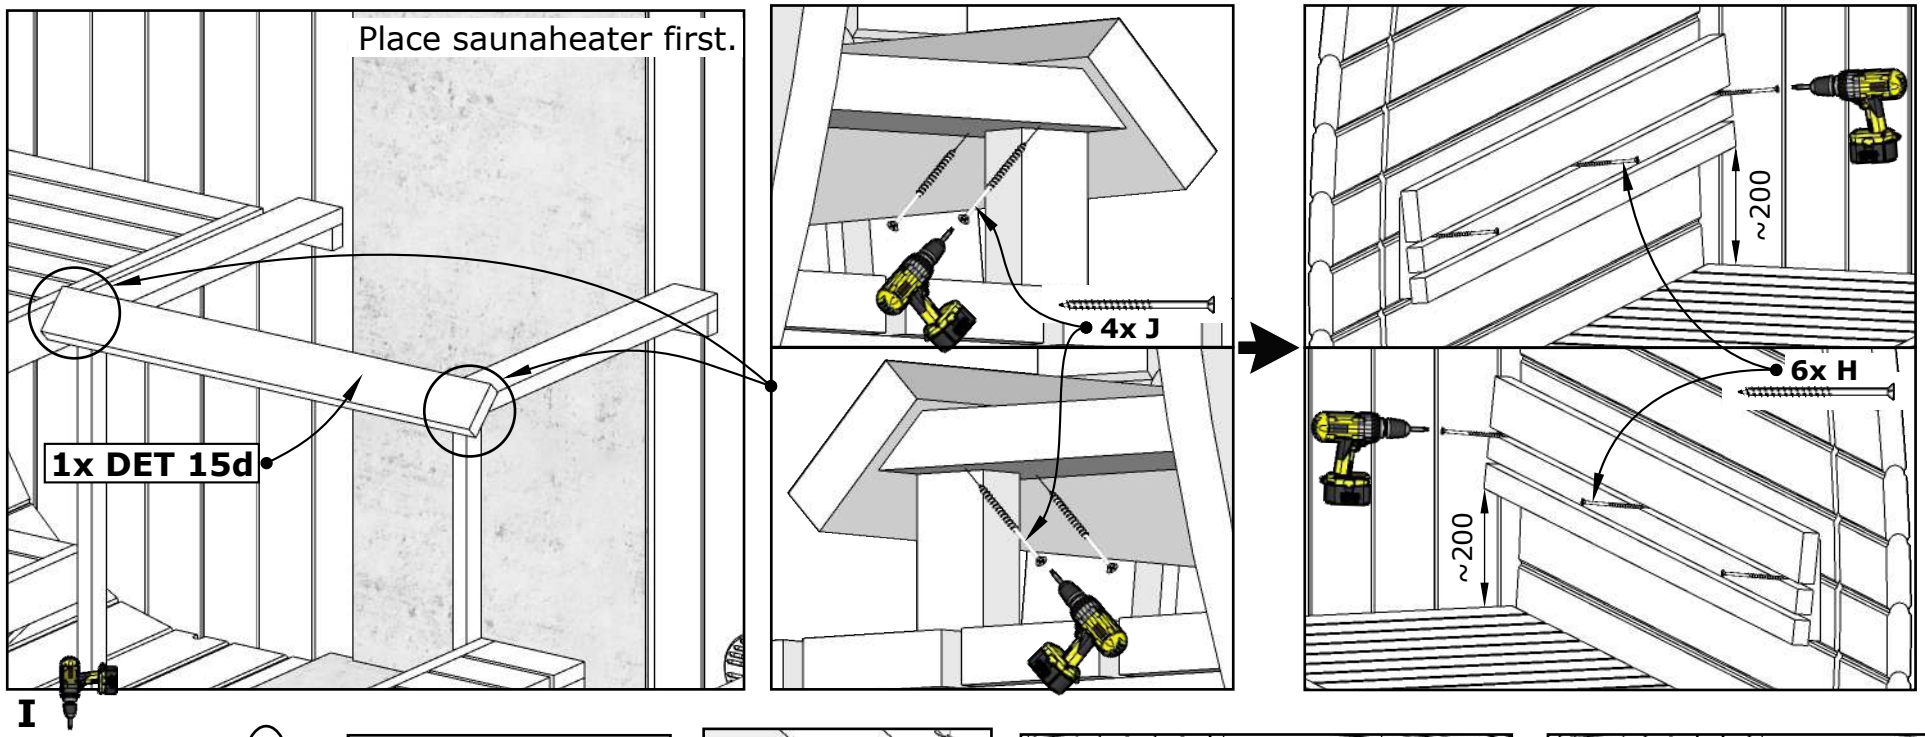

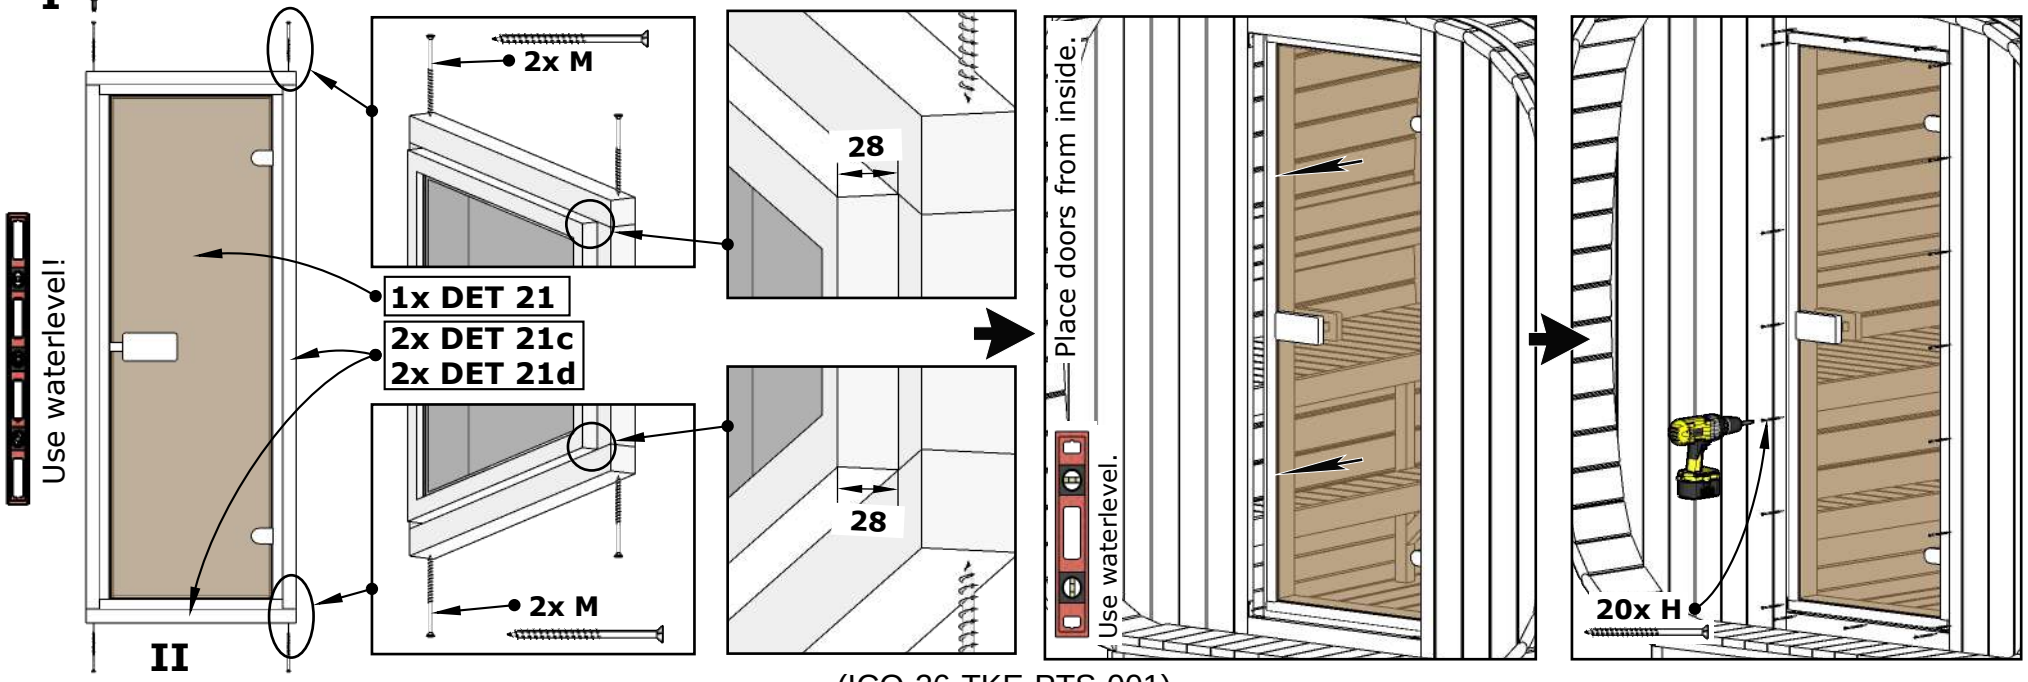

(ICO-26-TKE-PTS-001)

Sauna "Icon" 220,Ø226

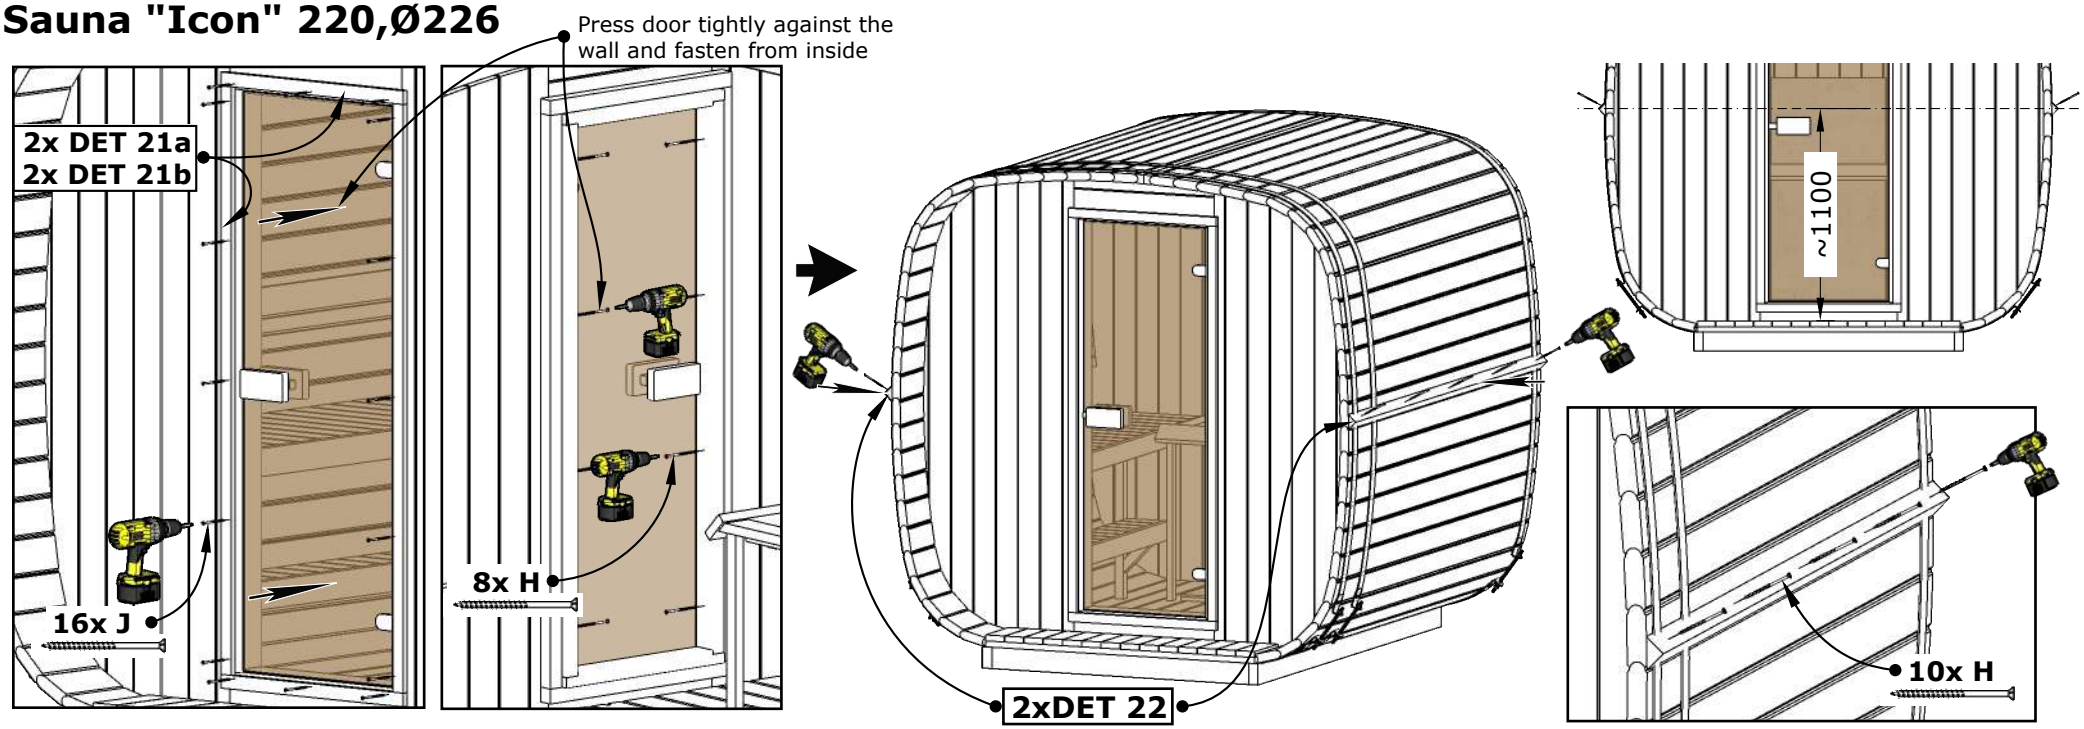

I

NB! Before roof shingles, install underlay felt.
Check underlay felt installation manual on extra pages.

Check also roof shingles installation manual inside package.

II

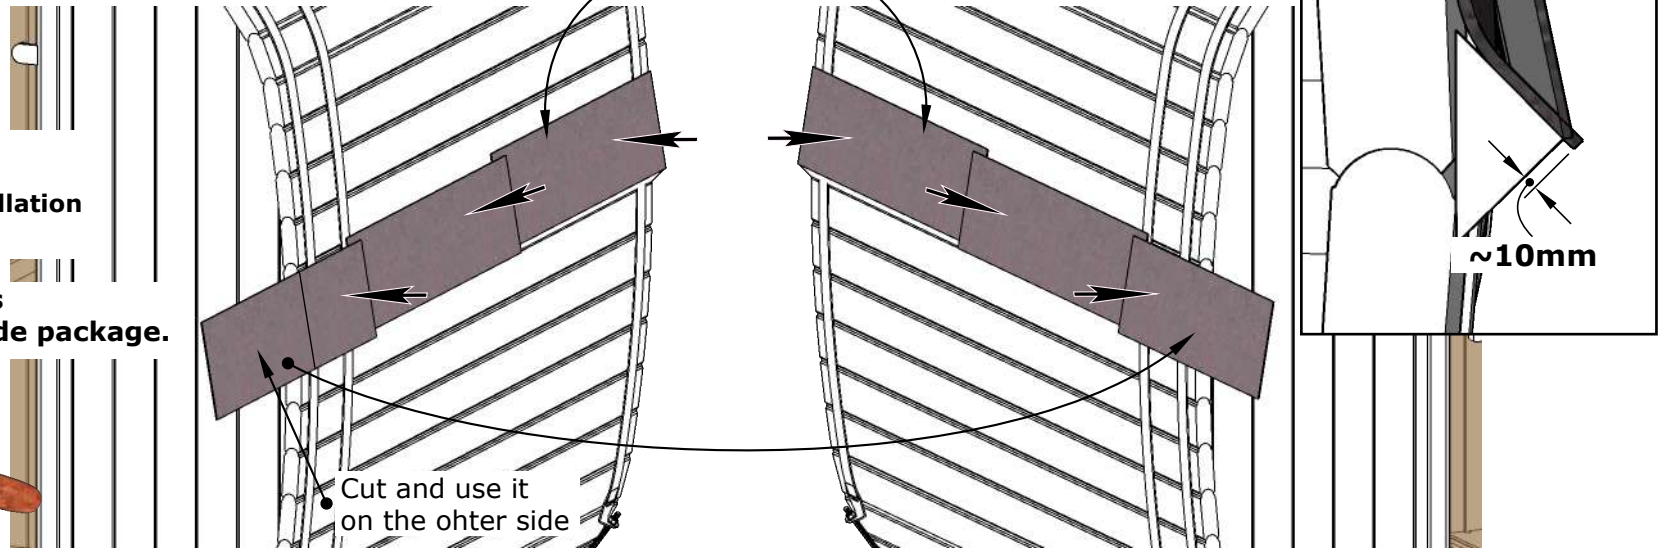

Sauna "Icon" 220,Ø226

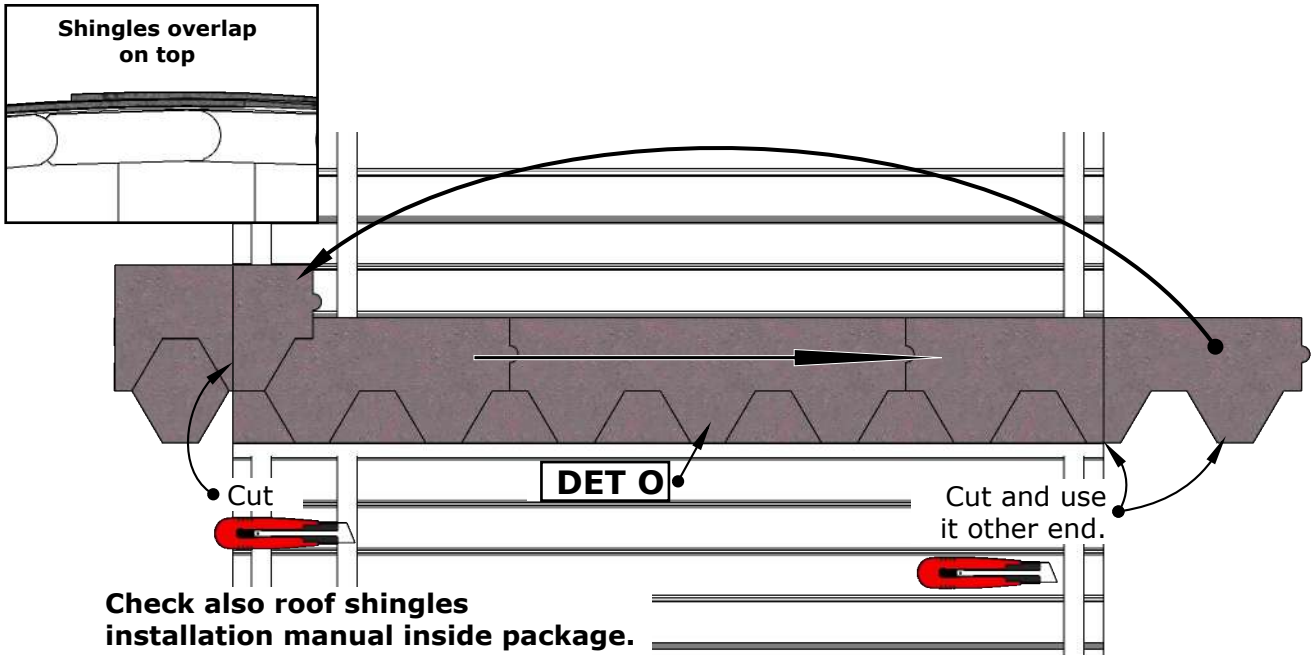

Check also roof shingles installation manual inside package.

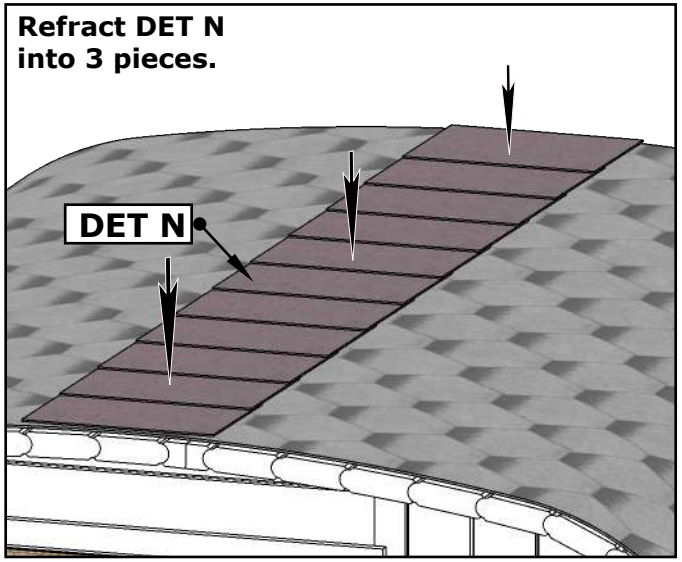

I

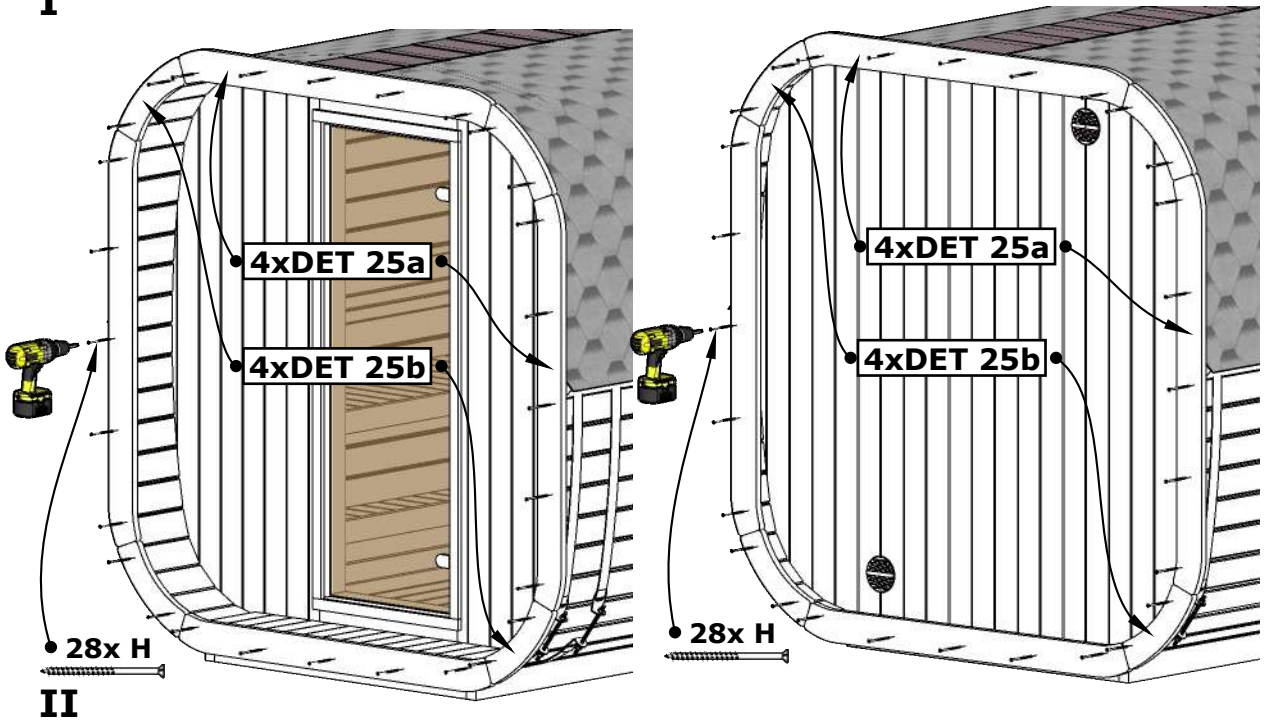

II

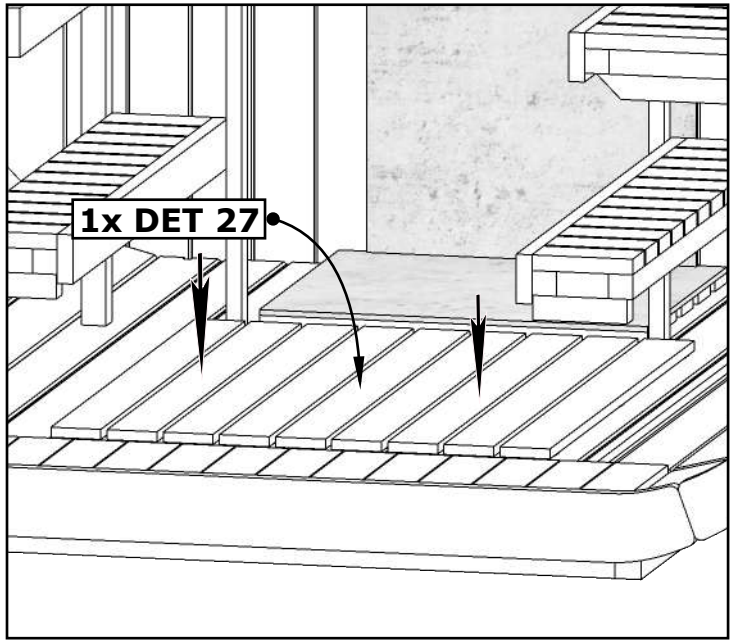

Underlay felt installation manual.

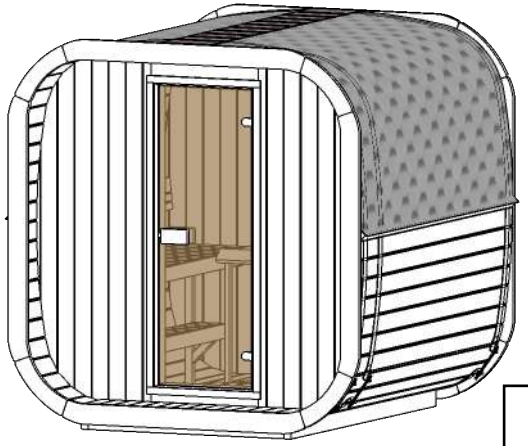

Check also underlay installation manual inside the package!

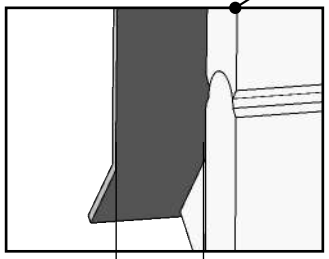

~50 mm
over the edge.

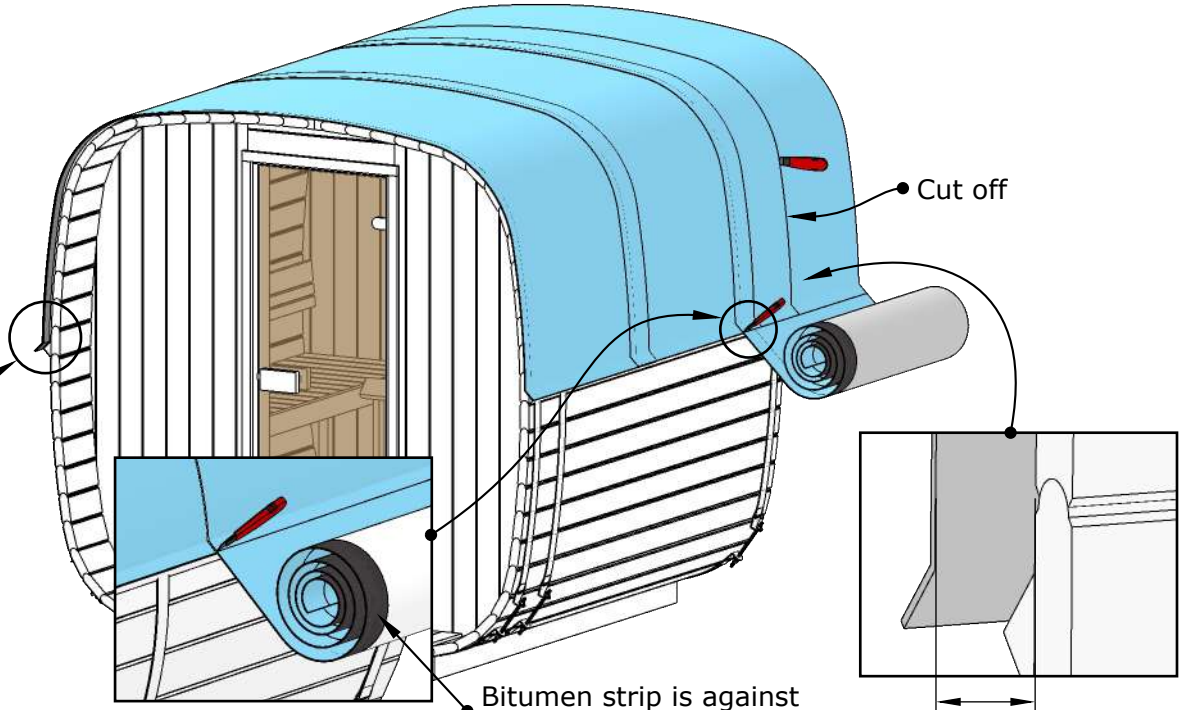
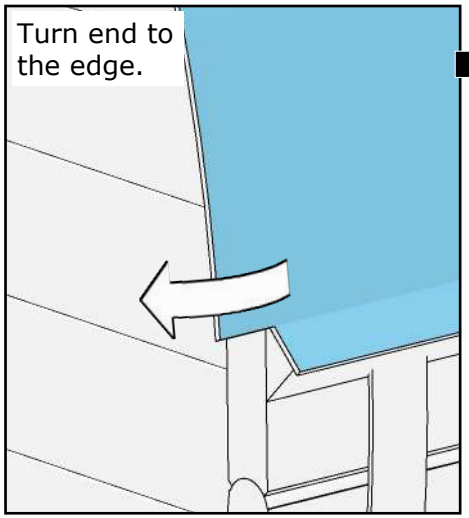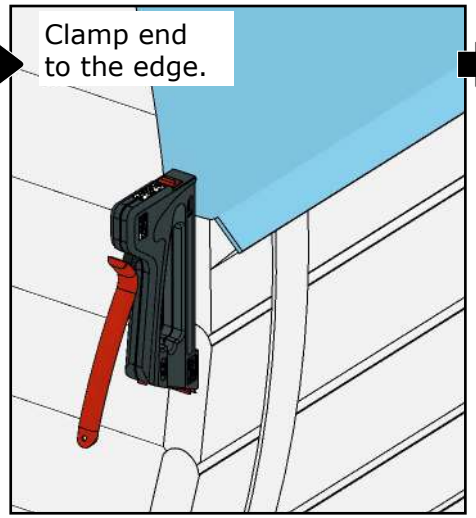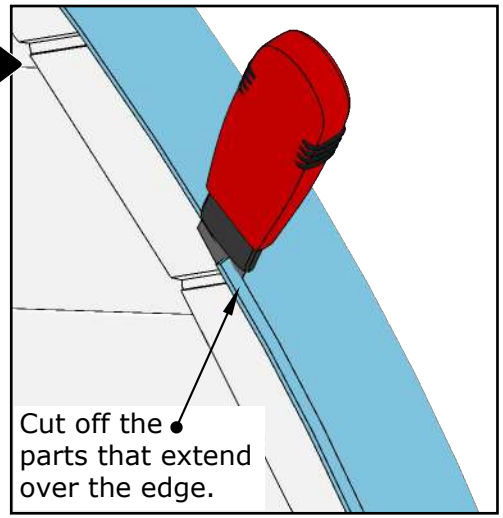
~50 mm
over the edge.